



# OZ & ALICE

## LED FOLLOWSPOTS

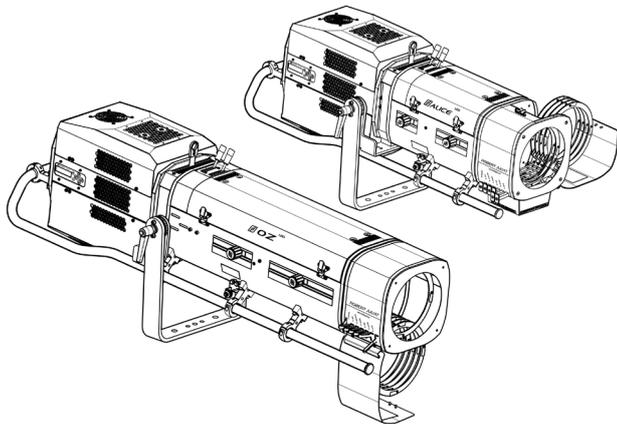

OZ 1169TC / ALICE 1469TC (TOP CONTROL)

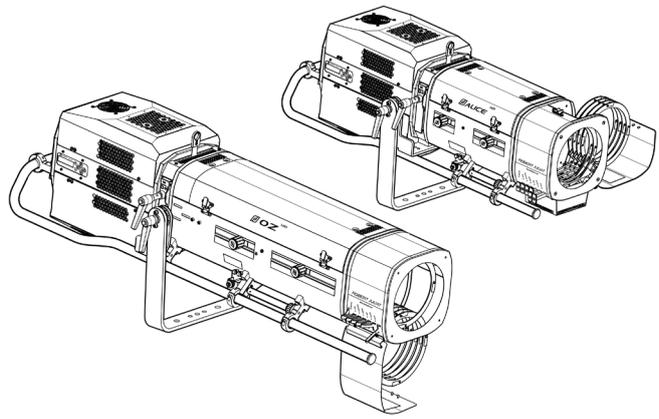

OZ 1169 / ALICE 1469


### 600 W FOLLOWSPOTS

| Model     | Standard     | North American |
|-----------|--------------|----------------|
| 7 – 14,5° | OZ 1169TC    | OZ 1169CTC     |
| 13 – 24°  | ALICE 1469TC | ALICE 1469 CTC |

| Model     | Standard   | North American |
|-----------|------------|----------------|
| 7 – 14,5° | OZ 1169    | OZ 1169C       |
| 13 – 24°  | ALICE 1469 | ALICE 1469 C   |

### 600W LED FOLLOWSPOTS

| User's manuals:  |   |
|--|---|
| <br>English | <br>Français |
| For more information:<br><a href="http://www.robertjuliat.com">www.robertjuliat.com</a>        | <a href="http://ww.robertjuliat.fr">ww.robertjuliat.fr</a>                                      |
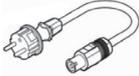
| Included:   |  |   |  |
|---|--|---|--|
| <br>CAL03 OR CAL04 | <br>DN41145300-C | <br>PF1011<br>x6 | <br>Quick Start Guide |
| <br>SGUP           | <br>VDM100      | <br>CCU1         |  |

V2x

Date: 01/07/22

### DN41145300-C

Robert Juliat S.A.S. 32, rue de Beaumont, F 60530 Fresnoy-en-Thelle - phone : +33 (0)3 44 26 51 89 - fax : +33 (0)3 44 26 90 79 - info@robertjuliat.fr

[www.robertjuliat.com](http://www.robertjuliat.com)



# 1 User's instructions

## GENERAL INSTRUCTIONS

1. Not for residential use.
2. **These fixtures must only be serviced by a qualified technician.**
3. In addition to the instructions indicated on this page, relevant health and safety requirements of the appropriate EU Directives must be adhered to at all times.
4. This fixture is in compliance with section 17 - Lighting appliance for theatre stages, television, cinema and photograph studios. Standards NF EN 60598-1, NF EN 60598-2-17, Low Voltage Directive 2014/35/UE & EMC Directive 2014/30/UE.
5. This fixture is rated as IP20, and is for indoor use only.

## FIXTURE

6. Ensure fixture is correctly mounted on an appropriate support.
7. Protection screens and lenses must be replaced in the event of any damage, such as cracks or deep scratches, since these might reduce performance.
8. When hung or flown the fixture must be secured by an additional hanging accessory (such as a safety cable or bond) of suitable length.
9. Safety bonds or cables must be securely attached to the back of the fixture and be as short as possible, or rolled up as necessary, to minimise travel distance should the fixture be dislodged.
10. Movable accessories (scroller, etc.) must also be secured with a suitable safety cable or bond at the front of the fixture.
11. The combined weight of both the fixture and the accessories must be considered when choosing the load-bearing capability of safety cable or bond.
12. Do not open lighting fixture when the source is on.
13. **WARNING:** LED source become hot during use. Allow fixture to cool before servicing.
14. Do not tamper with design of fixture nor any of its safety features.
15. Tighten electrical mains cable connections regularly and replace with one of identical specification if damaged.
16. Use only with correct power supply.

## VENTILATION

17. Keep well away from flammable material.
18. Not for outdoor use. Do not cover. Do not permit fixture to get wet.
19. To avoid overheating, do not obstruct air vents.
20. Ensure any cooling fans are in correct working order. If fans are not working, turn fixture off immediately and service as necessary.

## CLEANING


21. Do not touch LED source with fingers.
22. Clean all optical parts with alcohol-based cleaner.
23. Clean all filters regularly.

## POWER SUPPLY

24. Disconnect from the mains before servicing.
25. Mains connection only. Do not connect to "electronic output" such as dimmer.
26. Not for outdoor use. Do not cover.
27. Ensure power supply circuit breakers, always remain accessible.


## PLEASE NOTE

These products have been built to conform to European standards relating to professional lighting equipment. Any modification made to our products will void the manufacturers' warranty.

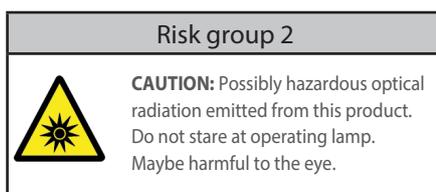


**Group risk 2. Luminaires should be positioned so that prolonged staring into luminaire at a distance closer than 30m (Oz) & 19m (Alice) is not expected.**

## 2 Installation

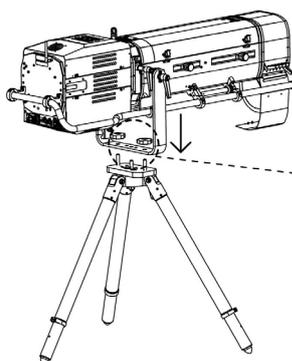


• GT4000 / S

*Please refer to the relevant user manual for further details.*

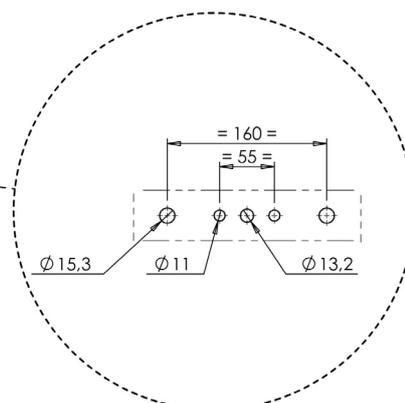


Dimensions in mm.

### 3 Functions

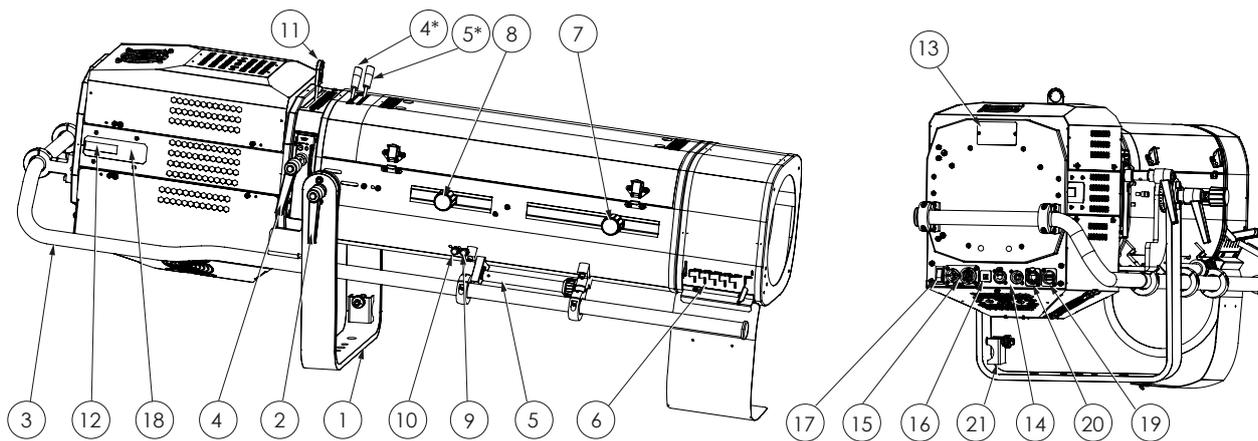


| Functions                                |                                   |
|--|-----------------------------------|
| 1. Yoke                                  | 10. Spare filter                  |
| 2. Yoke locking                          | 11. Gobo holder                   |
| 3. Side operating                        | 12. Local display                 |
| 4. Iris control (1169/1469 only)         | 13. Identification plate          |
| 4*. Iris control (1169TC/1469TC only)    | 14. Data connectors (OUT and IN)  |
| 5. Dimming control (1169/1469 only)      | 15. Power connectors (IN and OUT) |
| 5*. Dimming control (1169TC/1469TC only) | 16. Thermal breaker               |
| 6. Colour changer                        | 17. Power switch                  |
| 7. Zoom adjustment                       | 18. Control board                 |
| 8. Focus adjustment                      | 19. USB connector                 |
| 9. Frost glass                           | 20. RJ45 connector                |
|  | 21. Cable lock                    |

### 4 Electrical / Data connections

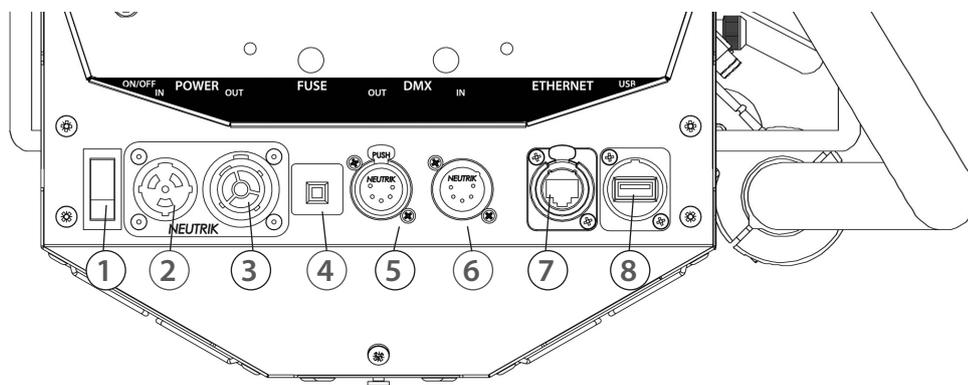

|   |               |  |
|---|---------------|--|
| 1 | Switch        | Power ON / OFF   |
| 2 | Power input   | Connector: Neutrik® powerCON TRUE1 Max. 16A.                 |
| 3 | Power output  | Connector: Neutrik® powerCON TRUE1 Max. 8A.                  |
| 4 | Fuse          | Thermal breaker: 10A. automatic switch                       |
| 5 | Data Out      | Connector: XLR 5-pin   |
| 6 | Data In       | Connector: XLR 5-pin / Protocol: USITT DMX 512-A RDM         |
| 7 | Ethernet      | Connector: RJ45 / Protocol Art-Net, sACN + software updating |
| 8 | Auxiliary out | Connector: USB (Not for charging purpose)                    |

## 4 Operation

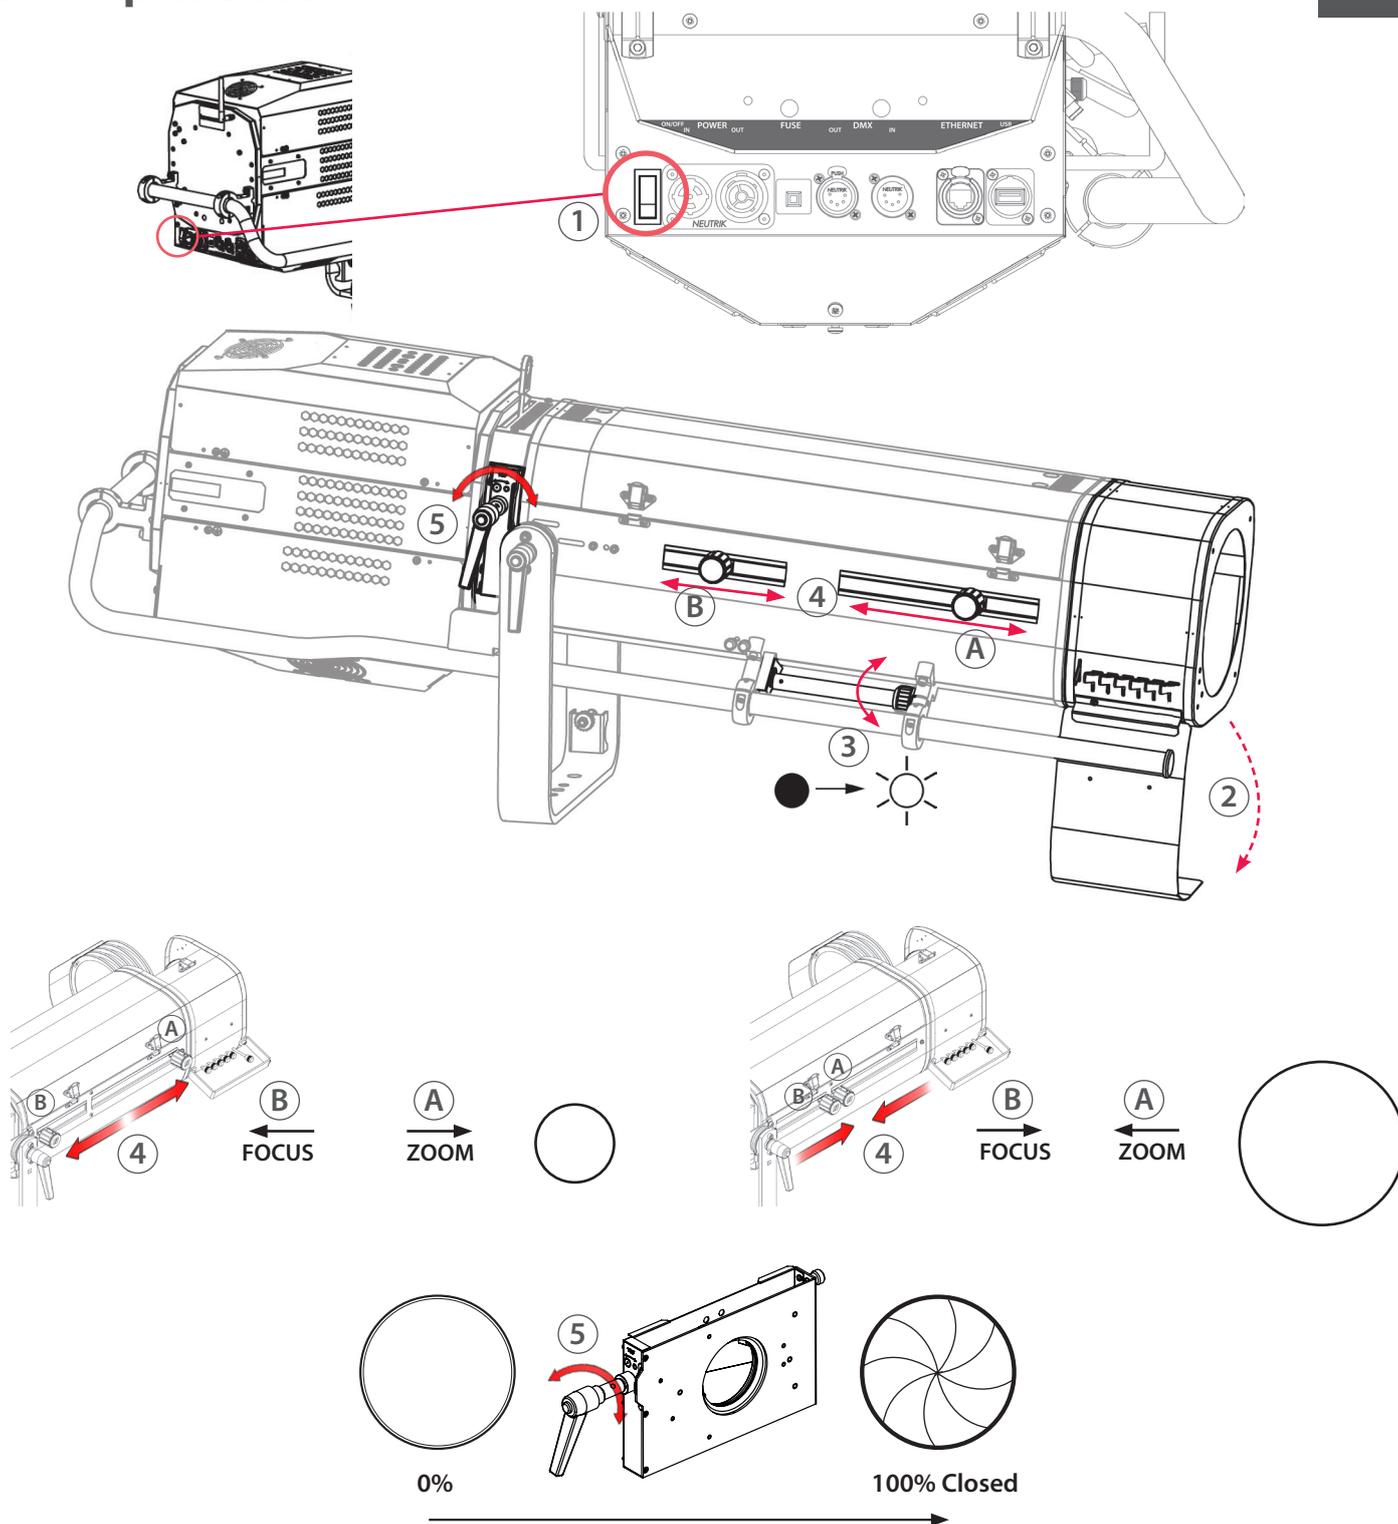

- ① Switch on the followspot by pressing the ON / OFF power button.
- ② Open the colour changer unit to let the light beam out.
- ③ Use the manual dimming control to adjust the light intensity.
- ④ The light beam zoom and focus can be set by using the control knobs A & B.
- ⑤ The beam size can be adjusted by using the iris cassette.