


ARTHUR

800W LED FOLLOWSPOTS

Manual

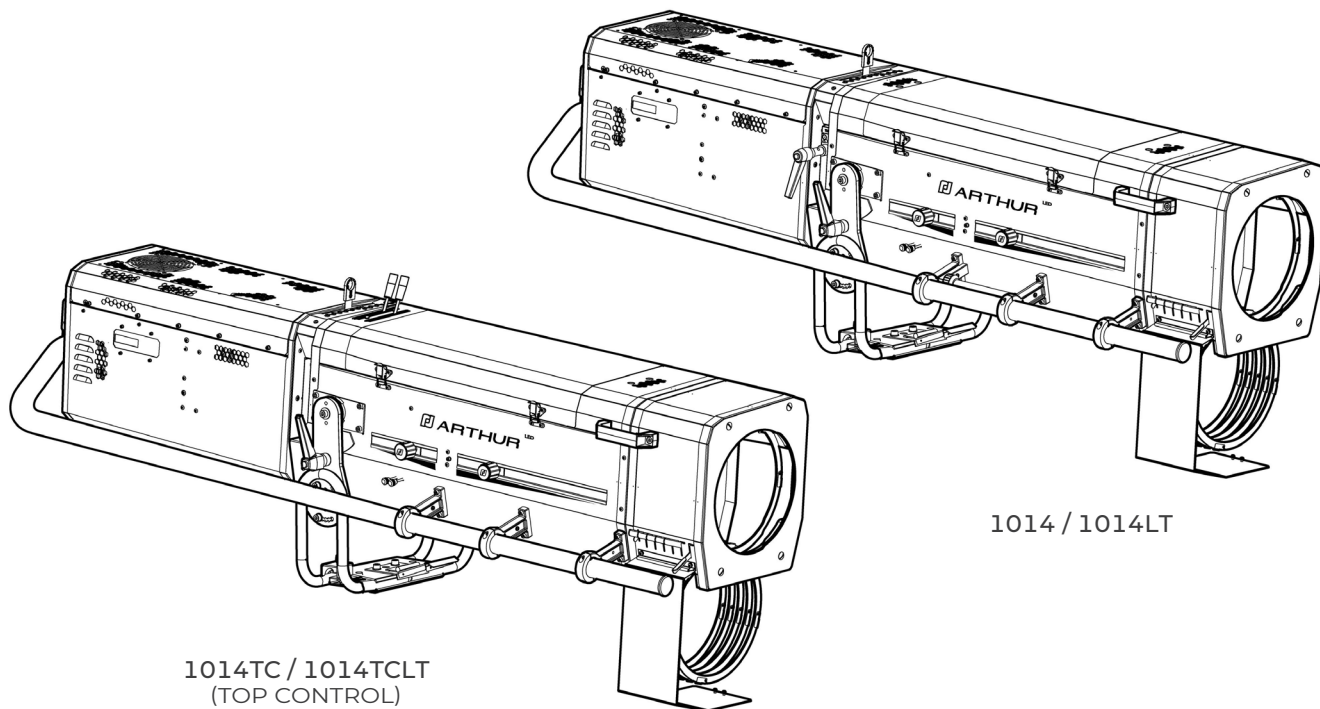

1014 / 1014LT

1014TC / 1014TCLT
(TOP CONTROL)

Angles	Controls	Model	
		Standard / CE	North American
5.5° - 15°	On the side	1014	1014C
5.5° - 15°	On top	1014TC	1014CTC

Angles	Controls	Model	
		Standard / CE	North American
4° - 10°	On the side	1014LT	1014CLT
4° - 10°	On top	1014TCLT	1014CTCLT

Product
Updates:



V1

- FIRMWARE: **V5.0x**
- RJ-LED2 FIRMWARE PLATFORM (Node Mode) full manual is available for download at www.robertjuliat.com/LED/PDF_PAGE

DN41195800-C (EN)

Released: 05/06/26

Robert Juliât S.A.S. 32, rue de Beaumont, F 60530 Fresnoy-en-Thelle - phone : +33 (0)3 44 26 51 89 - info@robertjuliat.fr

www.robertjuliat.com



ROBERT JULIAT

Table of Contents

1	User's instructions	1	4.9 Frost and correction filters	24
2	Presentation	2	4.9.1 Range	24
2.1	Functions	2	4.9.2 Control	24
2.2	Identification label	3	5 Controls and parameters	25
2.3	Accessories included	3	5.1 Local display and controls	25
2.4	Accessories	4	5.1.1 Display	25
3	Set-up	5	5.1.2 Home screen	25
3.1	Mechanics	5	5.1.3 Menu	26
3.1.1	Operating positions	5	5.1.4 Parameters	27
3.1.2	Minimum distance between a flammable material	5	5.2 DMX512 - A remote control	28
3.1.3	Instructions for use	5	5.2.1 Protocol	28
3.1.4	Handling	5	5.2.2 Configuration	28
3.1.5	Lifting	5	5.2.3 Parameters	29
3.1.6	Yoke adjustment	6	5.2.3.1 DMX Hold	29
3.1.7	Stand set-up	6	5.2.3.2 Fixture ID	29
3.2	Electrical information	7	5.2.3.3 Terminator	29
3.2.1	LED source	7	5.2.3.4 Node	29
3.2.2	Power supply	7	5.2.4 DMX chart	30
3.3	DATA	8	5.2.5 DMX ranges	30
3.3.1	DMX 512-A / RDM	8	5.2.5.1 Strobe duration	30
3.3.2	Art-Net / sACN / DUAL	9	5.2.5.2 Strobe speed	30
3.3.3	Ethernet / DMX node / DUAL	9	5.2.5.3 Response time	30
3.4	Accessories	10	5.2.5.4 Control mode	31
3.4.1	Full closing iris cassette	10	5.2.6 RDM remote control	32
3.4.2	Colour changer unit - boomerang	10	5.2.6.1 Protocol	32
3.4.3	Colour changer unit - push-pull (option)	11	5.2.6.2 Functions	32
3.4.4	Gobo holder	11	5.3 Home values	34
3.4.5	Frosted / Correction filter (option)	12	5.4 Network	34
3.4.6	Internal glass holder 120 x 120 mm (option)	12	5.4.1 Art-Net remote control	36
3.4.7	Counterweight (option)	13	5.4.1.1 Protocol	36
3.4.8	Stands (option)	14	5.4.1.2 Configuration	36
3.4.9	Telrad followspot sight (option)	14	5.4.1.3 Local set-up	37
3.4.10	RJ cable strap (accessory)	14	5.4.2 sACN remote control	38
3.4.11	Flight-case (option)	15	5.4.2.1 Protocol	38
4	Operations	16	5.4.2.2 Configuration	38
4.1	Light intensity	16	5.4.2.3 Local set-up	39
4.1.1	Range	16	5.4.3 Dual remote control	40
4.1.2	Control	6	5.4.3.1 Protocol	40
4.1.3	Parameters	17	5.4.3.2 Configuration	40
4.1.3.1	Dimming resolution - DMX only	17	5.4.3.3 Local set-up	41
4.1.3.2	Dimming curve	17	5.4.4 Web interface	42
4.1.3.3	Master control	17	5.4.4.1 Control	42
4.1.3.4	Set maximum position	18	5.4.4.2 Connection to the Web interface	42
4.1.3.5	Dimming mode	18	5.4.5 LLRP (Low-Level Reader Protocol)	43
4.2	Strobe	18	5.5 Fan cooling modes	44
4.2.1	Range	18	5.5.1 Range	44
4.2.2	Control	18	5.5.2 Control	44
4.3	Response time	19	5.6 Local potentiometer	45
4.3.1	Range	19	6 Service	46
4.3.2	Control	19	6.1 Preventive maintenance	46
4.4	Beam size adjustment	20	6.1.1 Frequency	46
4.4.1	Range	20	6.1.2 General cleaning	46
4.4.2	Control	20	6.1.3 General visual check	46
4.5	Pan / Tilt	21	6.1.4 LED source	46
4.5.1	Range	21	6.1.5 Optics	46
4.5.2	Control	21	6.1.6 LED house cleaning	47
4.6	Iris	22	6.2 Analysis	48
4.6.1	Range	22	6.3 Electronic thermal management system	48
4.6.2	Control	22	6.4 Firmware update	48
4.7	Gobo	22	6.5 Factory defaults	49
4.7.1	Range	22	6.6 Selftest	49
4.7.2	Control	22		
4.8	Colour	23		
4.8.1	Range	23		
4.8.2	Control	23		

GENERAL INSTRUCTIONS

1. Not for residential use.
2. These fixtures must only be serviced by a qualified technician.
3. In addition to the instructions indicated on this page, relevant health and safety requirements of the appropriate EU Directives must be adhered to at all times.
4. This fixture is in compliance with section 17 - Lighting appliance for theatre stages, television, cinema and photograph studios.
Standards NF EN 60598-1, NF EN 60598-2-17, Low Voltage Directive 2014/35/UE & EMC Directive 2014/30/UE.
5. This fixture is rated as IP20, and is for indoor use only.

FIXTURE

6. Ensure fixture is correctly mounted on an appropriate support.
7. Protection screens and lenses must be replaced in the event of any damage, such as cracks or deep scratches, since these might reduce performance.
8. When hung or flown the fixture must be secured by an additional hanging accessory (such as a safety cable or bond) of suitable length.
9. Safety bonds or cables must be securely attached to the back of the fixture and be as short as possible, or rolled up as necessary, to minimise travel distance should the fixture be dislodged.
10. Movable accessories (scroller, etc.) must also be secured with a suitable safety cable or bond at the front of the fixture.
11. The combined weight of both the fixture and the accessories must be considered when choosing the load-bearing capability of safety cable or bond.
12. Do not open lighting fixture when the source is on.
13. WARNING: LED source becomes hot during use. Allow fixture to cool before servicing.
14. Do not tamper with design of fixture nor any of its safety features.
15. Tighten electrical mains cable connections regularly and replace with one of identical specification if damaged.
16. Use only with correct power supply.

VENTILATION

17. Keep well away from flammable material.
18. Not for outdoor use. Do not cover. Do not permit fixture to get wet.
19. To avoid overheating, do not obstruct air vents.
20. Ensure any cooling fans are in correct working order. If fans are not working, turn fixture off immediately and service as necessary.

CLEANING

21. Do not touch the LED source with your fingers.
22. To clean the optical parts, use a soft cloth in combination with distilled water or isopropyl alcohol recommended for coated optics. Do not use any cleaning product that contains solvents or abrasives, as these can cause surface damage.
Dry with a soft lint-free cloth.
23. Regularly remove dust with a soft lint-free cloth.
24. If the fixture has filters, they must be cleaned frequently.


POWER SUPPLY

25. Disconnect from the mains before servicing.
26. Mains connection only. Do not connect to "electronic output" such as dimmer.
27. Ensure power supply circuit breakers, always remain accessible.


PLEASE NOTE

This product has been built to conform to European standards relating to professional lighting equipment. Any modification made to our products will void the manufacturers' warranty.

Risk group 2




CAUTION: Possibly hazardous optical radiation emitted from this product. Do not stare at operating lamp. Maybe harmful to the eye.

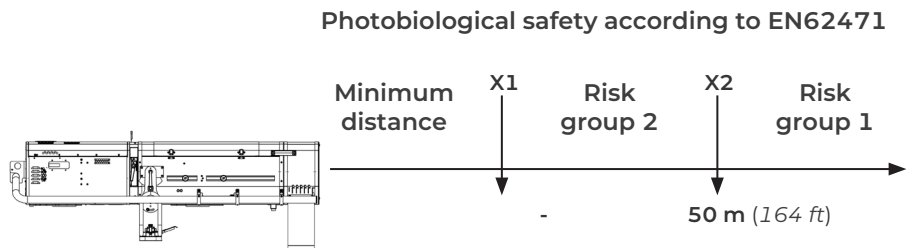

Risk group 2. Luminaires should be positioned so that prolonged staring into luminaire at a distance closer than 50 m is not expected.


2.1 Functions

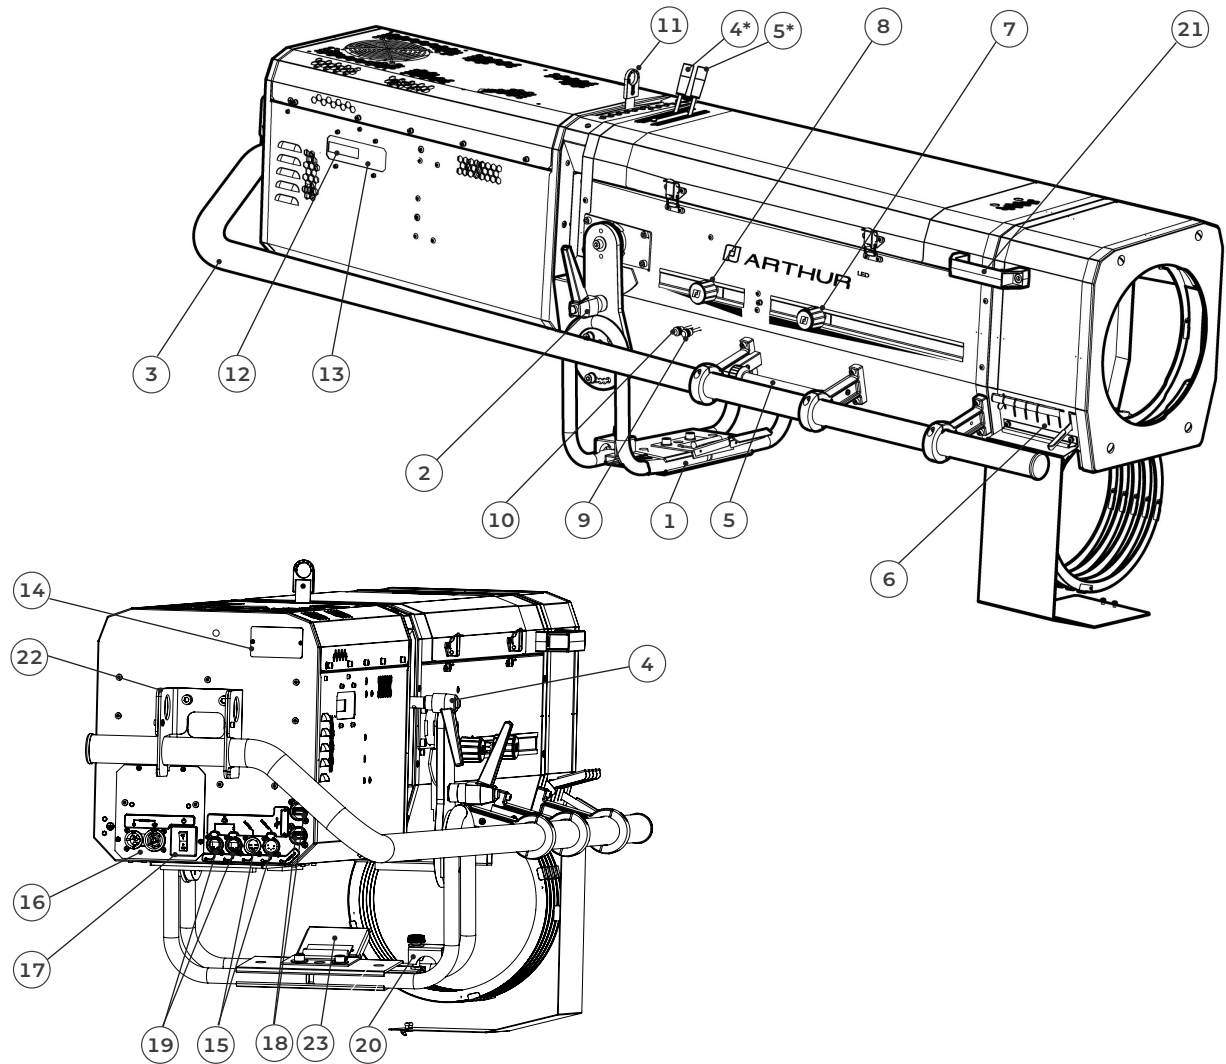

Description	
1	Yoke
2	Tilt locking handle
3	Side operating handle
4	Iris control (1014/1014LT only)
4*	Iris control (1014TC/1014TCLT only)
5	Dimming control (1014/1014LT only)
5*	Dimming control (1014TC/1014TCLT only)
6	Colour changer
7	Zoom adjustment
8	Focus adjustment
9	Frost glass
10	Spare filter
11	Gobo holder
12	Local display
13	Keypad
14	Identification plate
15	Data connectors (OUT and IN)
16	Power connectors (IN and OUT)
17	Power switch (thermal breaker)
18	USB connectors for accessories
19	RJ45 connectors
20	Cable lock
21	Handles
22	Lifting rings
23	Tilt stopper

Description	
	<ol style="list-style-type: none"> 1. MOD.: Model 2. VERS.: Version 3. U : Nominal voltage input (V) 4. I: Nominal intensity (A) 5. P : Maximum power input (W) 6. IP : International Protection Rating 7. t^a : Maximum ambient temperature (°C) 8. t^c : Maximum external temperature of the unit (°C) 9. Net weight (kg) 10. Minimum distance between a flammable material and the lighting unit (m) 11. Colour temperature version 12. Serial number 13. Replace broken glass 14. Class 1 product label 15. Read manual first label 16. European conformity label 17. WEEE directive label 18. CEI-TR-62778 - Do not stare at light source 19. EN62471 - Risk group 20. UKCA (UK Conformity Assessed) label
<p>Units:</p> <ul style="list-style-type: none"> - Weight = kilogram (kg). - Intensity = Ampere (A). - Voltage = Volt (V). - Frequency = Hertz (Hz). - Temperature = degree Celsius (°C). 	


2.3 Accessories included

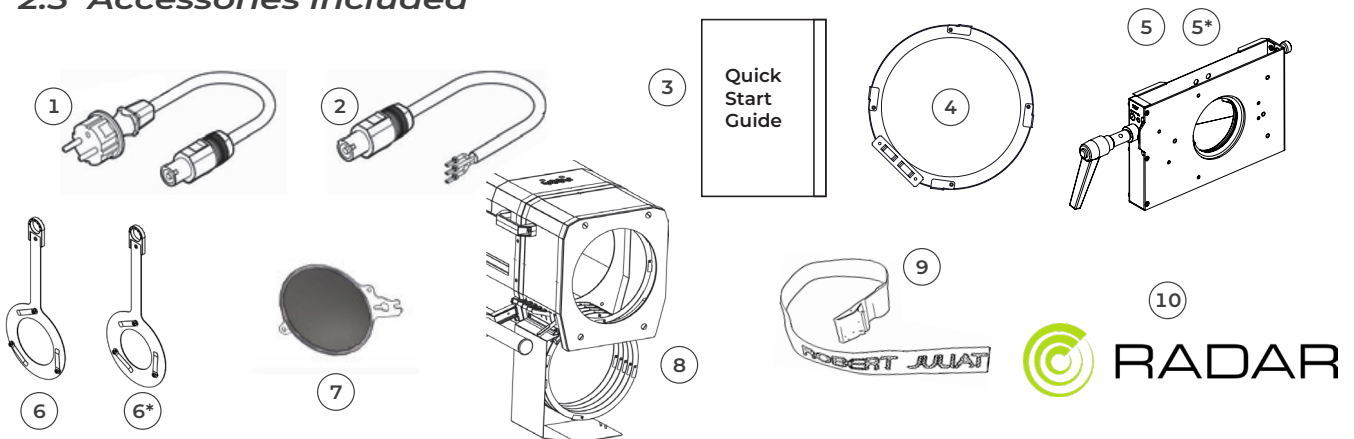

Reference	Description
1 CAL03	3 meter power cable (3G1,5 HO7RNF) with Neutrik PowerCon® True1 TOP and CEE 7/7 (2P+T NF/ SCHUKO) connectors (standard version)
2 CAL04	1,50m power cable UL/CSA with Neutrik® powerCON TRUE1 TOP connector (North American version)
3 DN41195900	Quick Start manual
4 PF1013	Ø270 mm metal filter holder (x6)
5 CCU1	Full closing iris cassette - Ø72 mm
5* CCU2	Full closing iris cassette - Ø55 mm for LT version
6 SGUP2	Universal "A" size gobo-holder (metal & glass)
6* SGUB2	"B" size gobo-holder (metal & glass) for LT version
7 FO120R-2	Ø120 mm 2° frost optical filter with holder
8 M270/2B	6-way "boomerang" colour changer
9 SAC1	RJ cable strap (25 x 500 mm) (x1)
10 Fusion/RJ	Madrix Radar (RDM monitoring): Fusion RJ licence - access to all RDM parameters of RJ fixtures

MADRIX RADAR – more information: www.robertjuliart.com/RDM-Tools/Madrix_Radar

2.4 Accessories

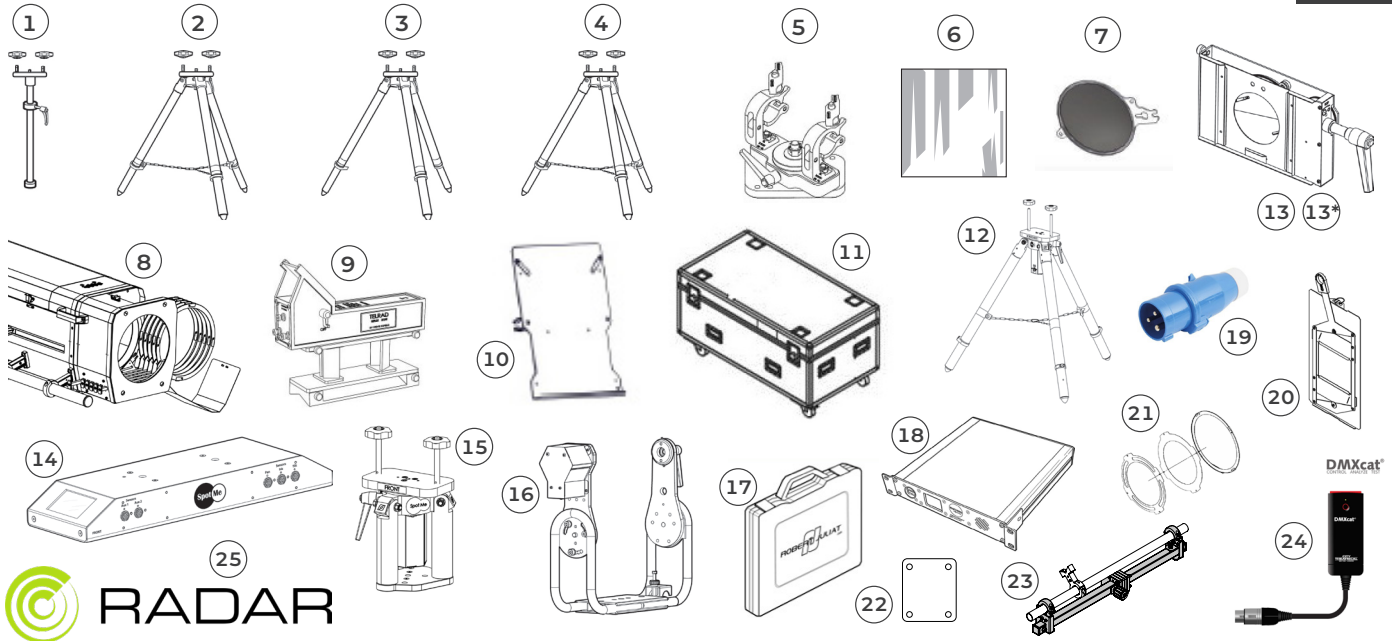

 **RADAR**

Reference	Description
1	JPP Monopod stand for overhead followspot
2	GT4000 Tripod stand with safety chain - SWL: 130 Kg - max. height: 1030 mm
3	GT4000S Tripod stand without safety chain - SWL: 130 Kg - max. height: 1030 mm
4	GT4000R Tripod stand with ball head rotation with security chain - SWL: 130 Kg - max. height: 1030 mm
5	T4000 Followspot mount for Ø50 mm pipe (suspension or overhead) - SWL= 100 Kg
6	VD 120 120x120mm frosted glass
	FO120C-1 120x120mm 1° frost optical filter
	FO120C-10 120x120mm 10° frost optical filter
	FO120C-2 120x120mm 2° frost optical filter
	FO120C-5 120x120mm 5° frost optical filter
7	FCM120R/2 Ø120mm 1/2 CTO correction filter (Rosco #3408) with holder
	FO120R-1 ø120mm 1° frost optical filter with holder
	FO120R-2 ø120mm 2° frost optical filter with holder
	FO120R-5 ø120mm 5° frost optical filter with holder
8	M270/2TM 6-way "Push/Pull" colour changer
9	Kit TELRAD Telrad followspot sight with raiser and universal mounting kit
10	SDUP Followspot cue sheet holder with universal mounting kit
11	FC1014/S Flight-case for LLT range / GT stand / accessories
12	GT4000RSM Tripod stand with safety chain - SWL: 130 Kg - max. height: 1030 mm (equipped with PAN sensor)
13	CCU1SM Full closing iris cassette with position sensor for SpotMe system Ø72 mm
13*	CCU2SM Full closing iris cassette with position sensor for SpotMe system Ø55 mm for LT version
14	SMS SpotMe server + 2 sensor cables + flight case
15	T4000RSM Followspot mount with ball head rotation and SpotMe PAN sensor SWL = 100 Kg - Weight: 8,83 Kg
16	FRO/SMCPD Heavy duty adjustable yoke equipped with TILT SpotMe sensor (C type)
17	TCSM SpotMe calibration tool kit
18	Maestro Maestro server for SpotMe - rackable unit: 1U - half 19"
19	PCP1716A 16A blue 2P+E 6h IEC60309 power connector (option)
20	G80/2 Ø80 mm horizontal chopper
21	PFR1 ø10,6 in --> ø9 in filter adaptor
22	BK/E1 Extra weight kit for BK1 (0,5 Kg) - Weight: 0.5 Kg
23	BK1 Followspot balancing kit (including 1 Kg counterweights) - Weight: 2.05 g


MADRIX RADAR – more information: www.robortjuliati.com/RDM-Tools/Madrix_Radar

24	DMXcat	Bluetooth DMX/RDM Multifunction test tool - City Theatrical DMXcat®
25	Fusion/S	Madrix Radar (RDM monitoring): Fusion Small licence - up to 64 non-RJ RDM fixtures - USB dongle included
	Fusion/M	Madrix Radar (RDM monitoring): Fusion Medium licence - up to 512 non-RJ RDM fixtures - USB dongle included
	Fusion/L	Madrix Radar (RDM monitoring): Fusion Large licence - up to 4096 non-RJ RDM fixtures - USB dongle included


3 Set-up

3.1 Mechanics


3.1.1 Operating positions

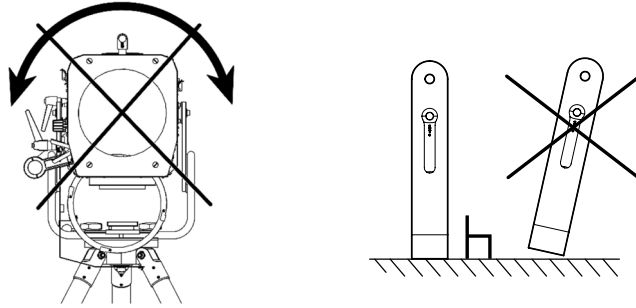


3.1.2 Minimum distance between a flammable material and the lighting unit

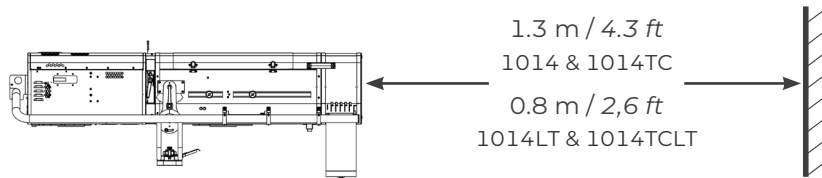

3.1.3 Instructions for use

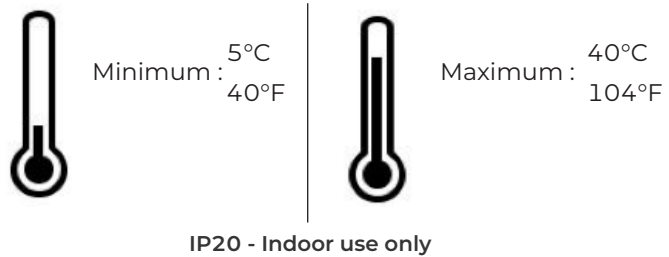


3.1.4 Handling

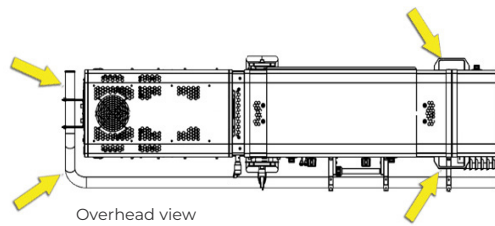

3.1.5 Lifting

• Net weight:
68.8 Kg (151.4 lbs)

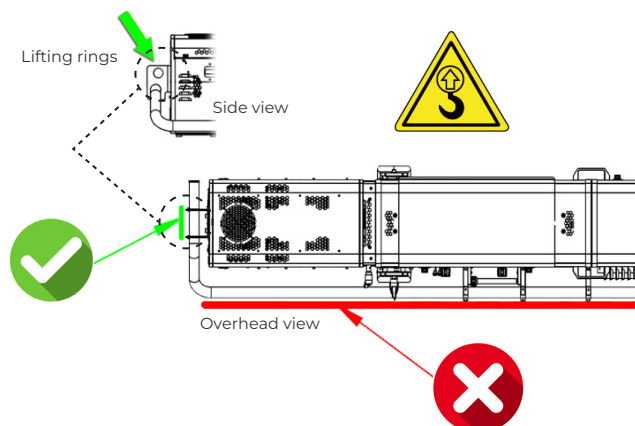

3.1.6 Yoke adjustment



Caution: Remove followspot from stand to set yoke position.

Remove screw to set desired position, then tighten.

Caution: Slightly untighten the screws without removing them to set yoke position.


Open out the tilt stopper

Caution: Place one of the stand legs towards the front to support the maximum tilt position.

3.1.7 Stand set-up

The unit must be installed only on a Robert Juliat compatible stand / head :	
JPP	Monopod stand for overhead followspot
GT4000	Tripod stand with safety chain - SWL: 130 Kg - max. height: 1030 mm
GT4000S	Tripod stand without safety chain - SWL: 130 Kg - max. height: 1030 mm
GT4000R	Tripod stand with ball head rotation with security chain - SWL: 130 Kg - max. height: 1030 mm
T4000	Followspot mount for Ø50mm pipe (suspension or overhead) - SWL= 100 Kg
GT4000RSM	Tripod stand with ball head rotation with safety chain and SpotMe PAN sensor - SWL: 130 Kg - max. height: 1030 mm
T4000RSM	Followspot mount with ball head rotation and SpotMe PAN sensor - SWL= 100 Kg

• GT4000 / GT4000S / GT4000R
Please refer to the relevant user manual for further details.

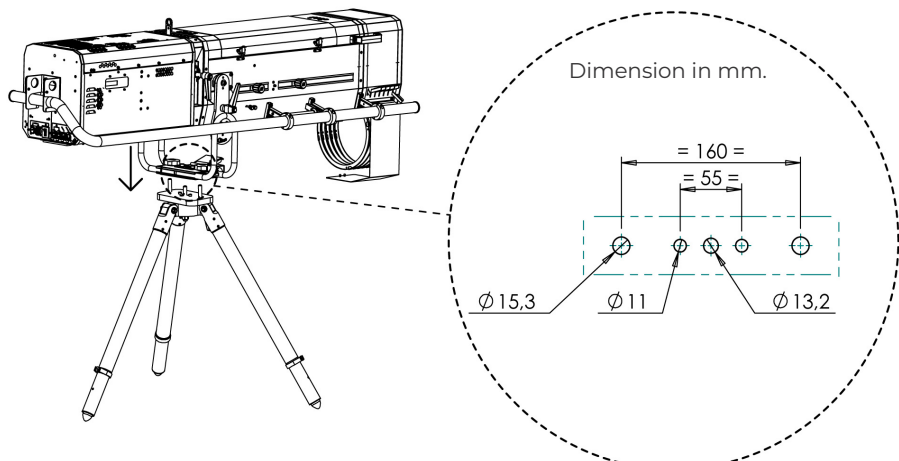

3.2 Electrical information


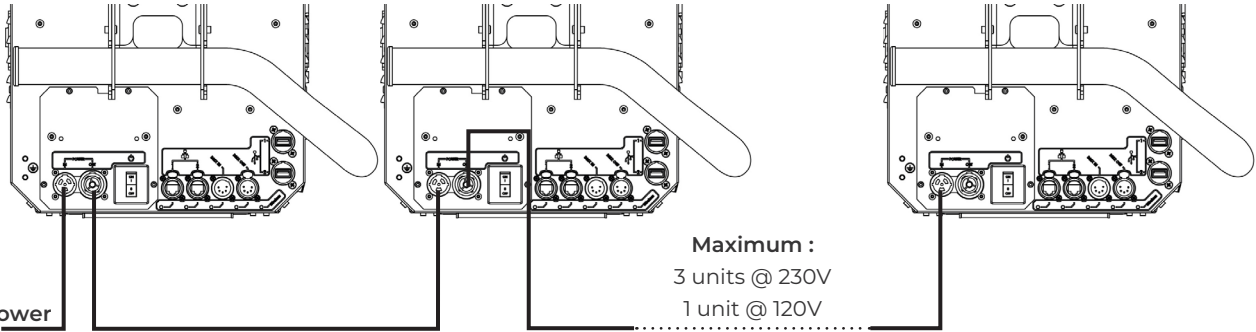
3.2.1 LED source




Never touch or scratch the LED surface.


See 6.1.4 LED cleaning procedure if cleaning is necessary.

3.2.2 Power supply

Power supply			
Voltage	Frequency	Input power	Connectors
100 → 240 V	50-60 Hz	4,3 A / 960 W @ 230V 8,7 A / 1030 W @ 120V 10,7 A / 1080 W @ 100V	Neutrik powerCON TRUE1 TOP Input : ref. NAC3FPX-TOP
 <ul style="list-style-type: none"> • Class 1 product. This luminaire must be earthed. • Must be connected directly to AC power. Do not connect to dimmer power. • Automatic mains voltage detection. 			
<p>Daisy chain:</p>  <p>Maximum : 3 units @ 230V 1 unit @ 120V</p>			

Power cable					
Power cable	Connector	Mains plug	Cable type	Cable length	Wiring
1	Standard version	CEE7/7	3G1.5 H07RNF	3 m 9.8 ft	Live: Brown Neutral: Blue Ground: Yellow/Green
2	North American version		-	14AWG SJ TYPE (UL/CSA)	1.5 m 4.9 ft
					

Power ON

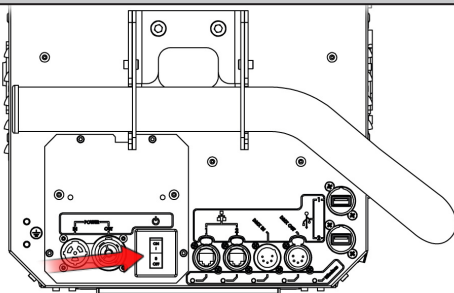

3.3 DATA


3.3.1 DMX 512-A / RDM

Protocol	Input connector	Output connector
USITT DMX 512-A RDM	XLR 5-pin	XLR 5-pin

DATA connectors

PIN #	DMX	Description	
1	Shielding	Foil & Braided Shield	
2	DMX (-)	1 st conductor of 1 st twisted pair	
3	DMX (+)	2 nd conductor of 1 st twisted pair	
4	Not used	1 st conductor of 2 nd twisted pair	
5	Not used	2 nd conductor of 2 nd twisted pair	

Daisy chain:

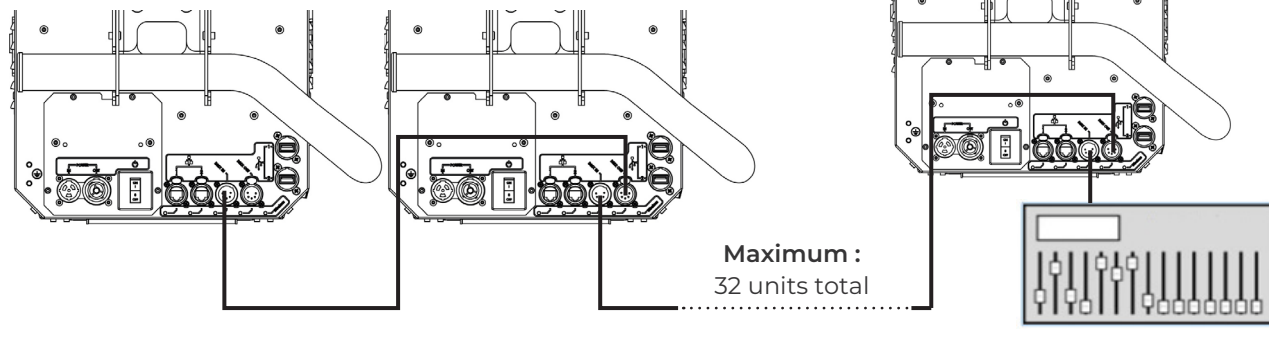

3.3.2 Art-Net / sACN / DUAL

· With external switch

Protocol	Input connector	Output connector
Art-Net (V3 & V4) sACN DUAL (SACN + Art-Net)	RJ45 #1 or #2	-

Daisy chain:

(*) A 1000 base-T switch that supports IGMP (Internet Group Management Protocol) is necessary if the unit is connected to a network switch to control multiple devices. The usage of non IGMP switch capability can cause erratic behavior of all connected devices.
For further reading: https://en.wikipedia.org/wiki/Internet_Group_Management_Protocol

3.3.3 Ethernet / DMX node / DUAL

· With integrated switch

Protocol	Input connector	Output connector
Art-Net (V3 & V4) sACN DUAL (SACN + Art-Net)	RJ45 #1	RJ45 #2

Daisy chain:

All units must be powered


Integrated switch specifications: 100 base-T unmanaged

- **Node** function must be activated only on the first unit of the daisy chain (see **Web Interface** section of the manual).
- **Web interface** is always available regardless of the protocol (**Art-Net/sACN**) selected.


3.4 Accessories




3.4.1 Full closing iris cassette

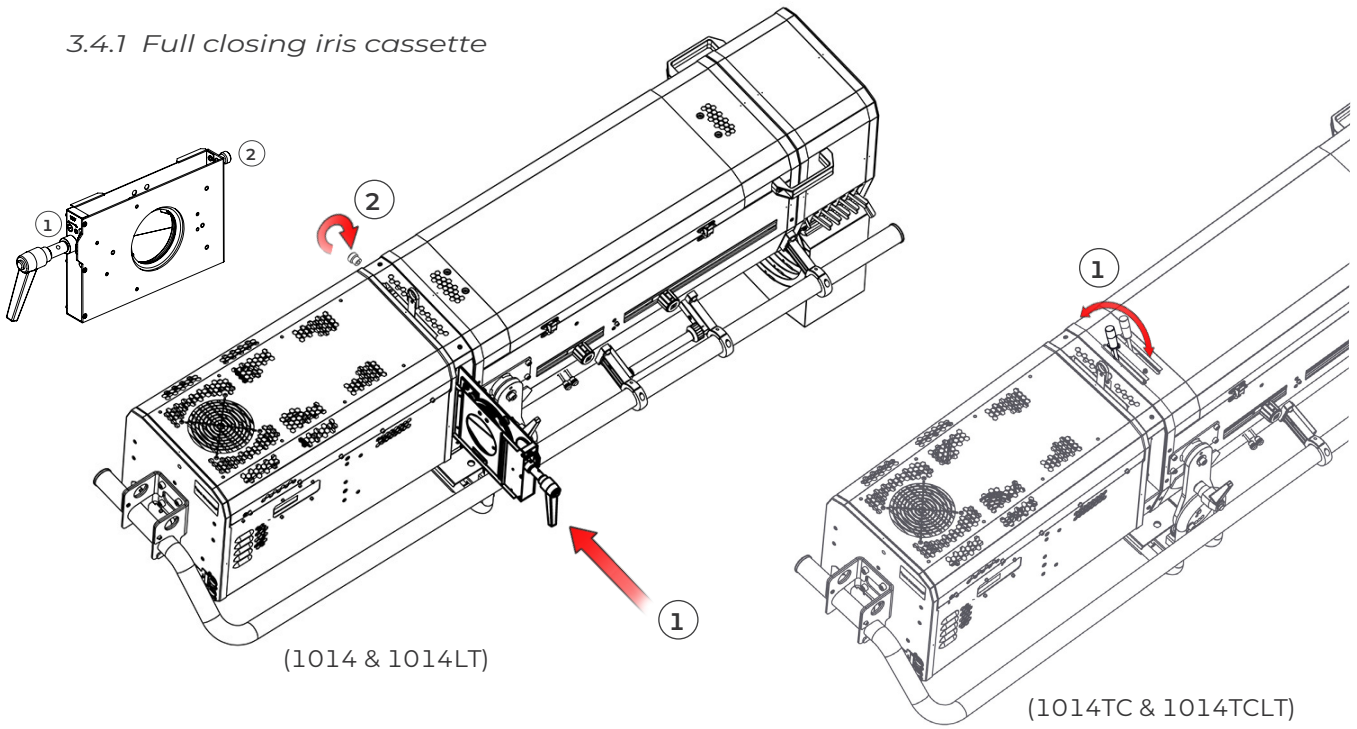

3.4.2 Colour changer unit - boomerang


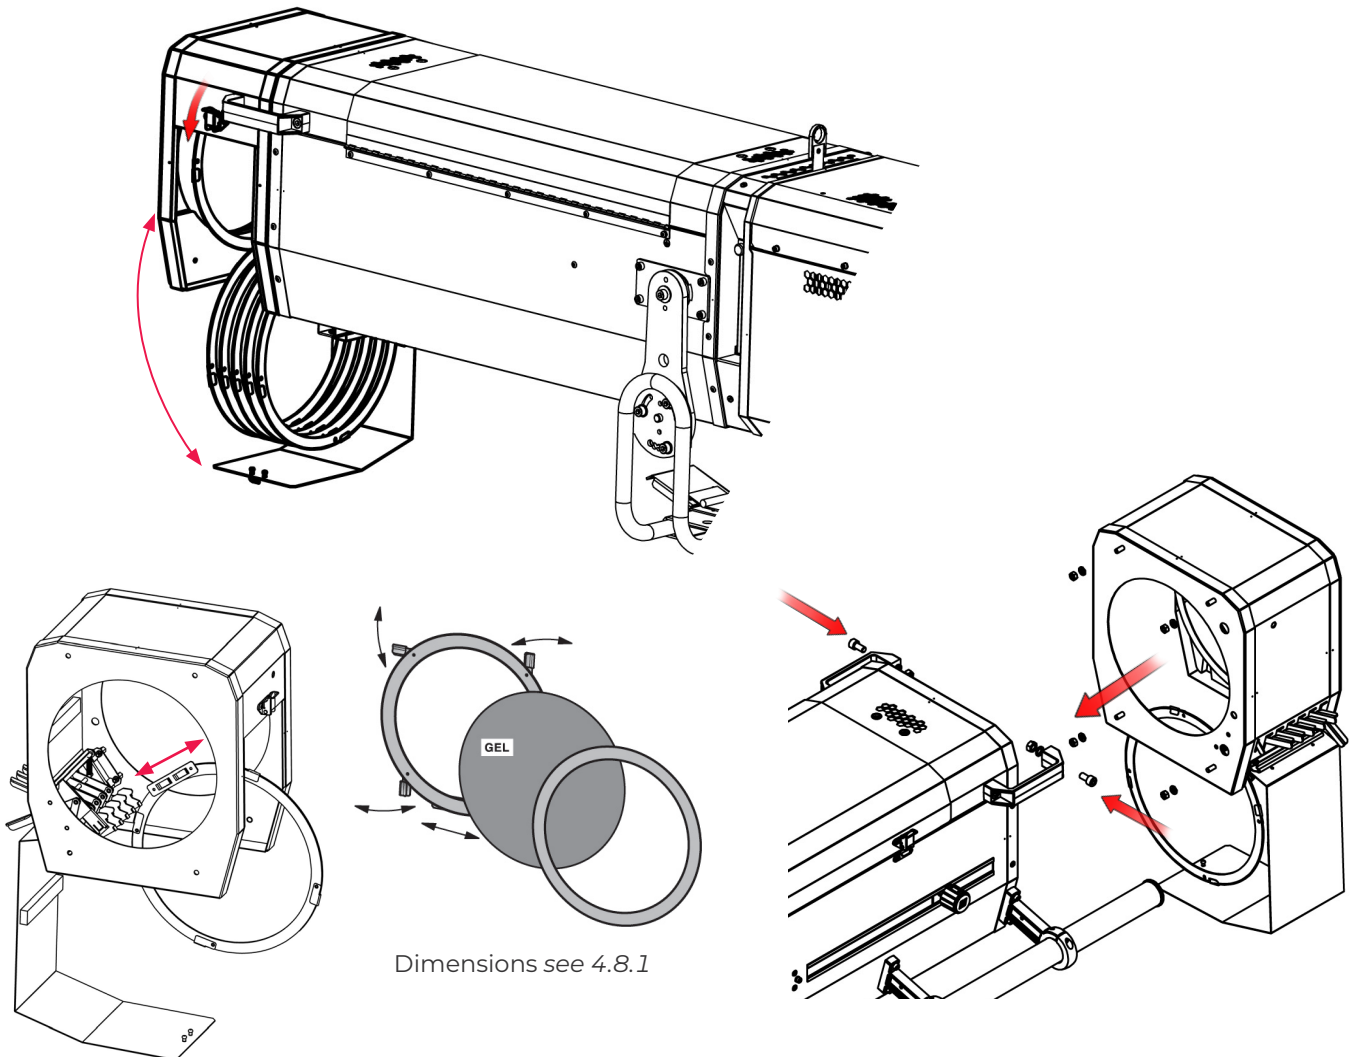


3.4.3 Colour changer unit - push-pull (option)

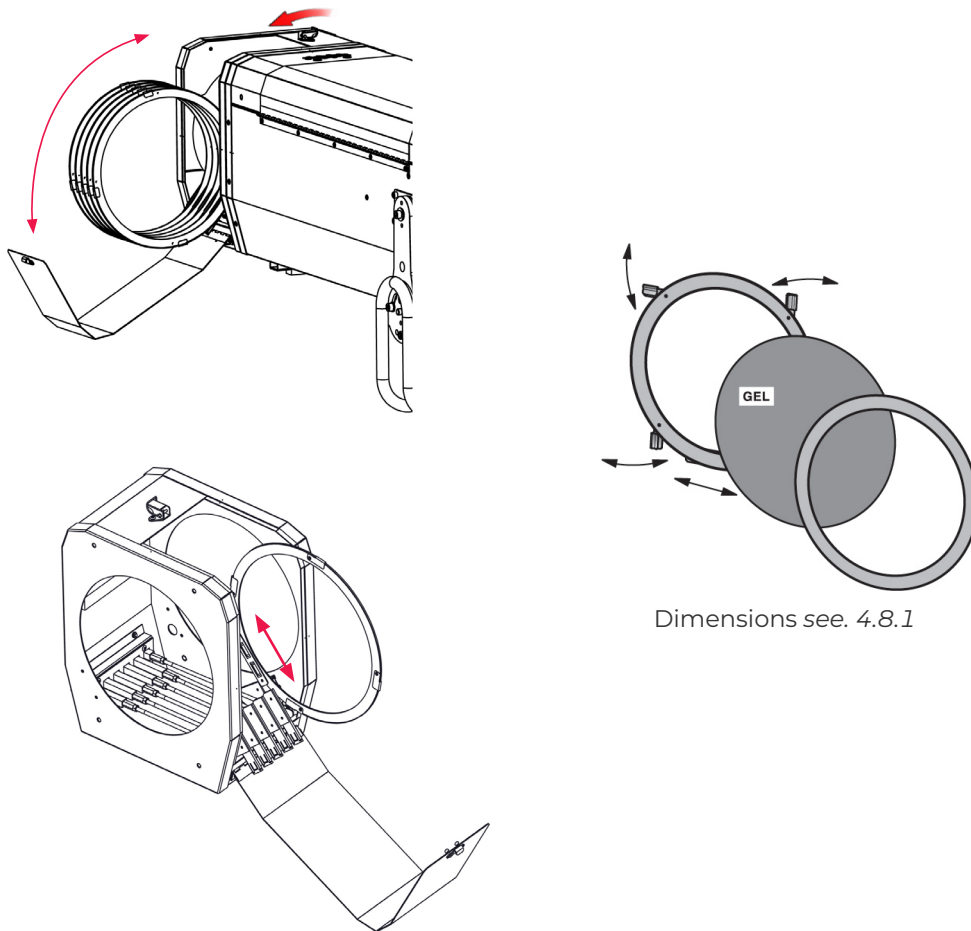

Dimensions see. 4.8.1

3.4.4 Gobo holder

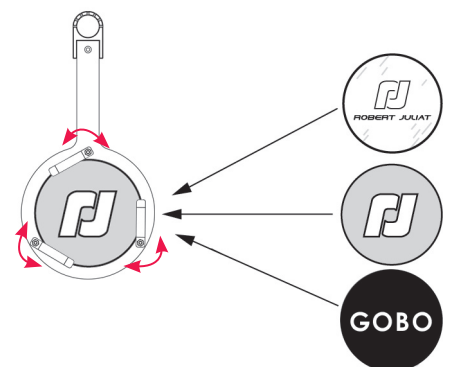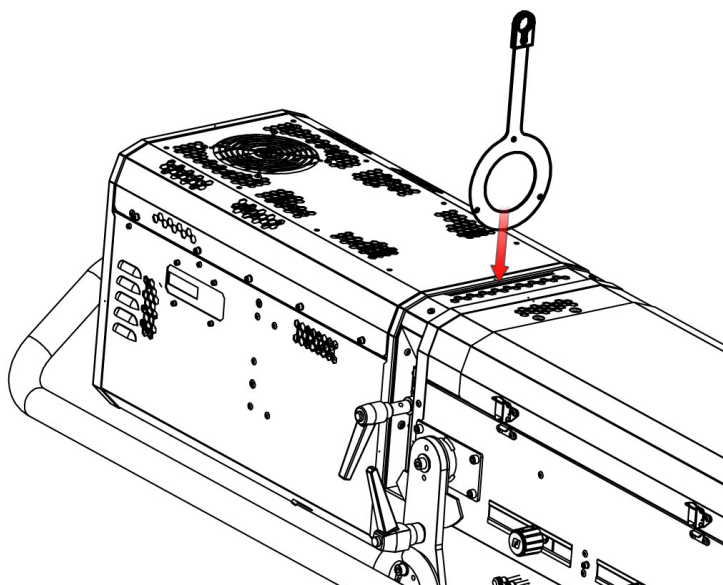


'A' size gobo

Dimensions see. 4.7.1

'B' size gobo (LT version)


Dimensions see 4.7.1

3.4.5 Frosted / Correction filter (option)

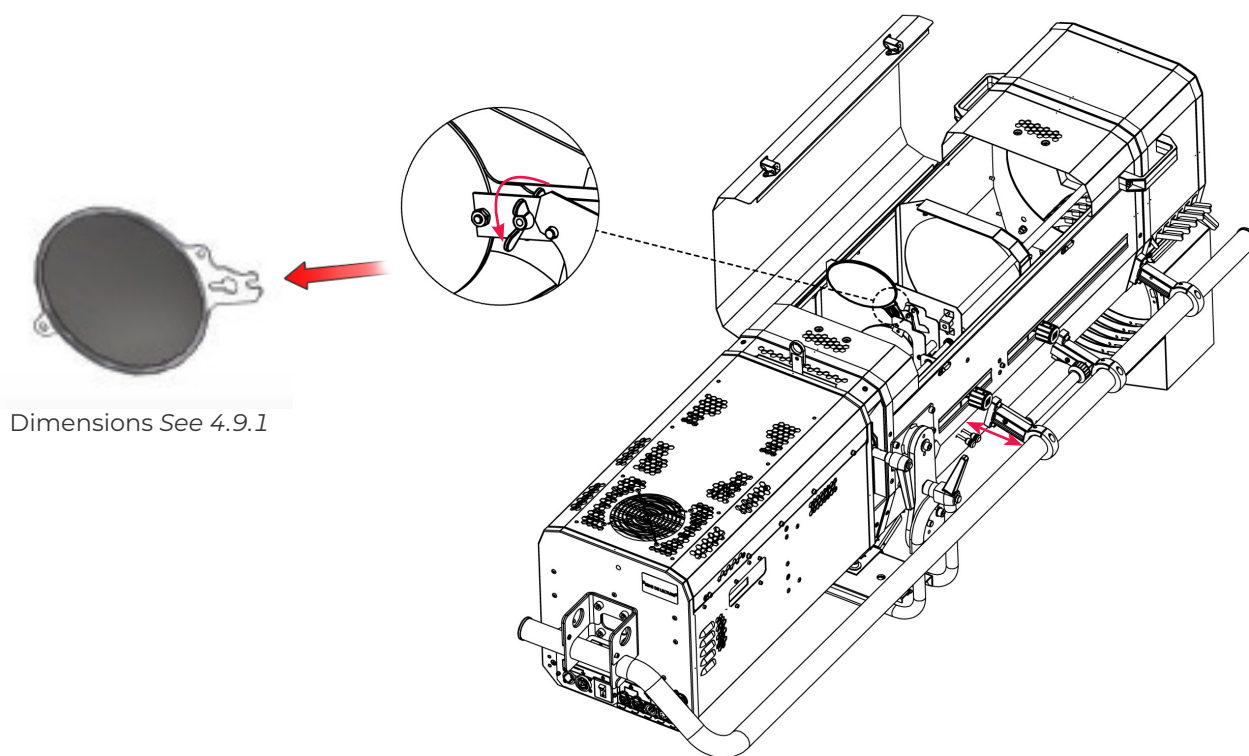


Dimensions See 4.9.1

3.4.6 Internal glass holder 120 x 120 mm (option)

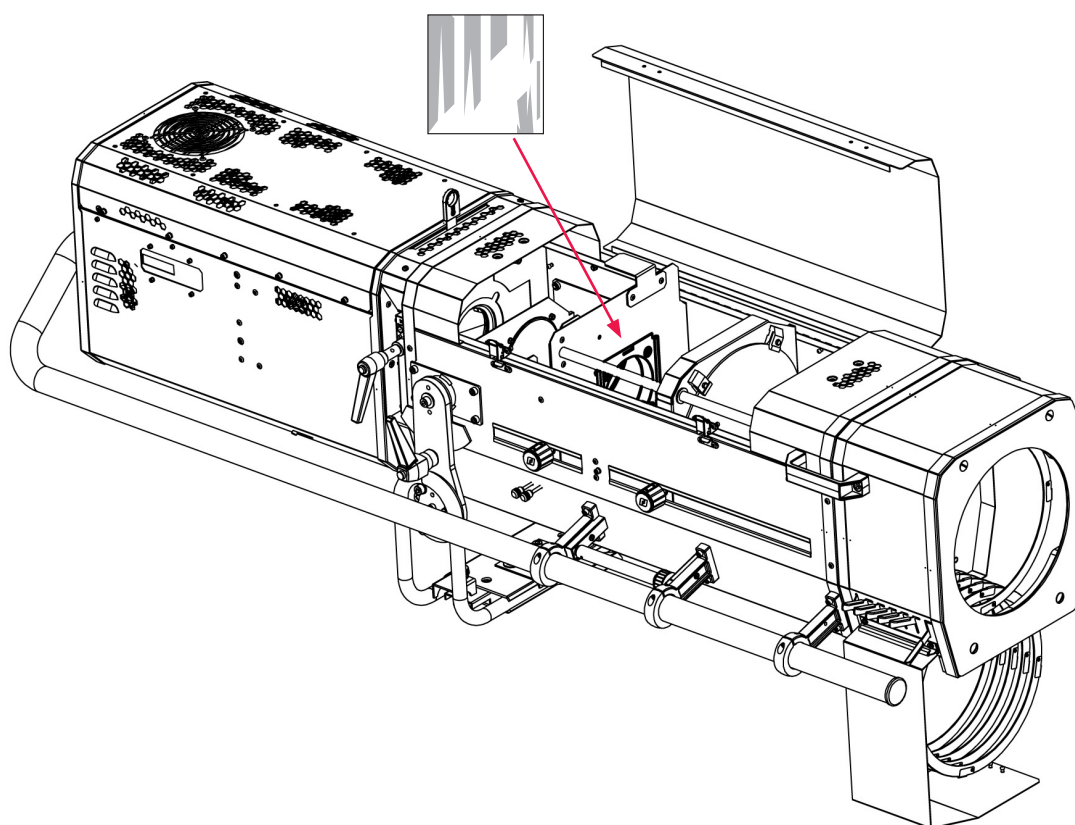

3.4.7 Counterweight (option)

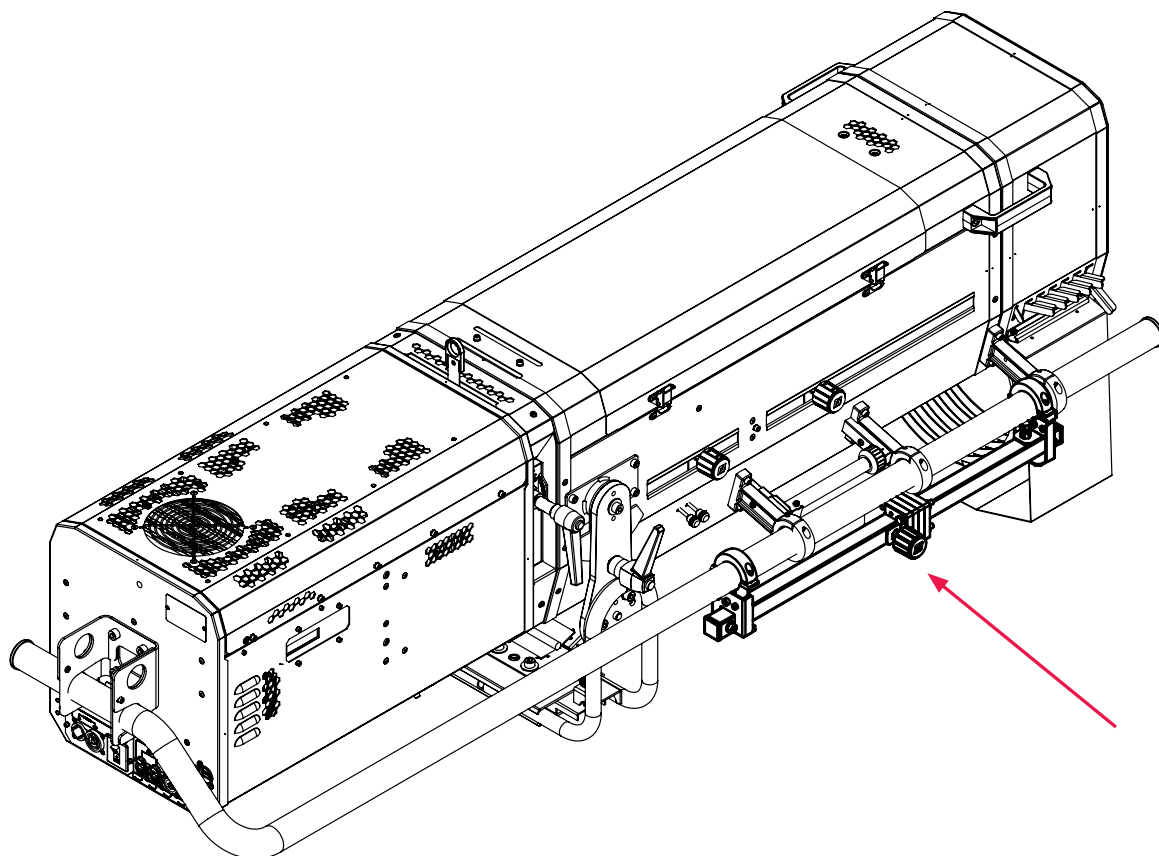


3.4.8 Stands (option)

· GT4000 Series : Please refer to the relevant stand technical files for further details.

Stand set-up, refer to See 3.1.7


3.4.9 Telrad followspot sight (option)

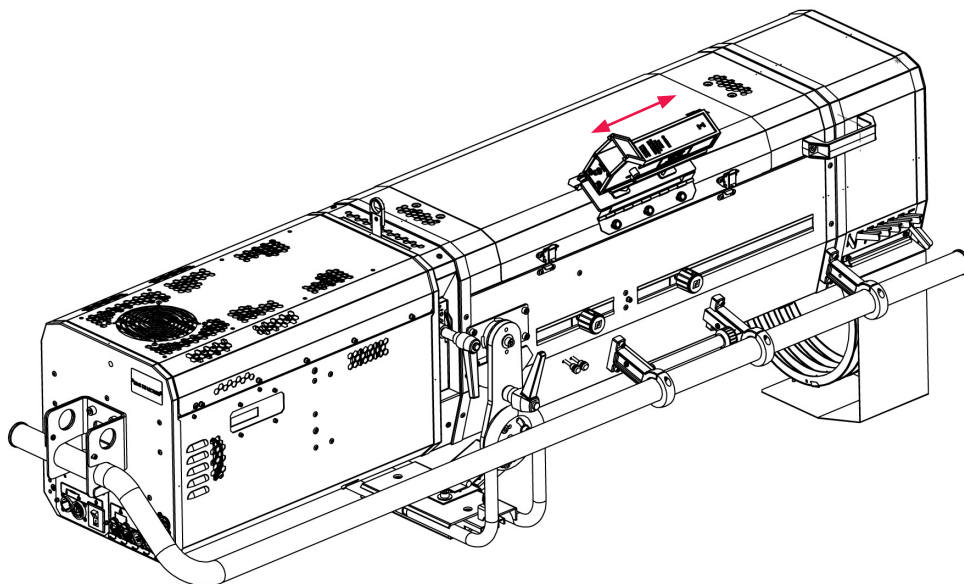


Followspot sight
guide available @
[www.robertjuliat.com/
followspots/Accessories](http://www.robertjuliat.com/followspots/Accessories)

Caution: - Do not install the followspot sight on the lamp house to avoid blocking the ventilation vents.
- Secure the sight with a suitable safety cable.

3.4.10 RJ cable strap (accessory)


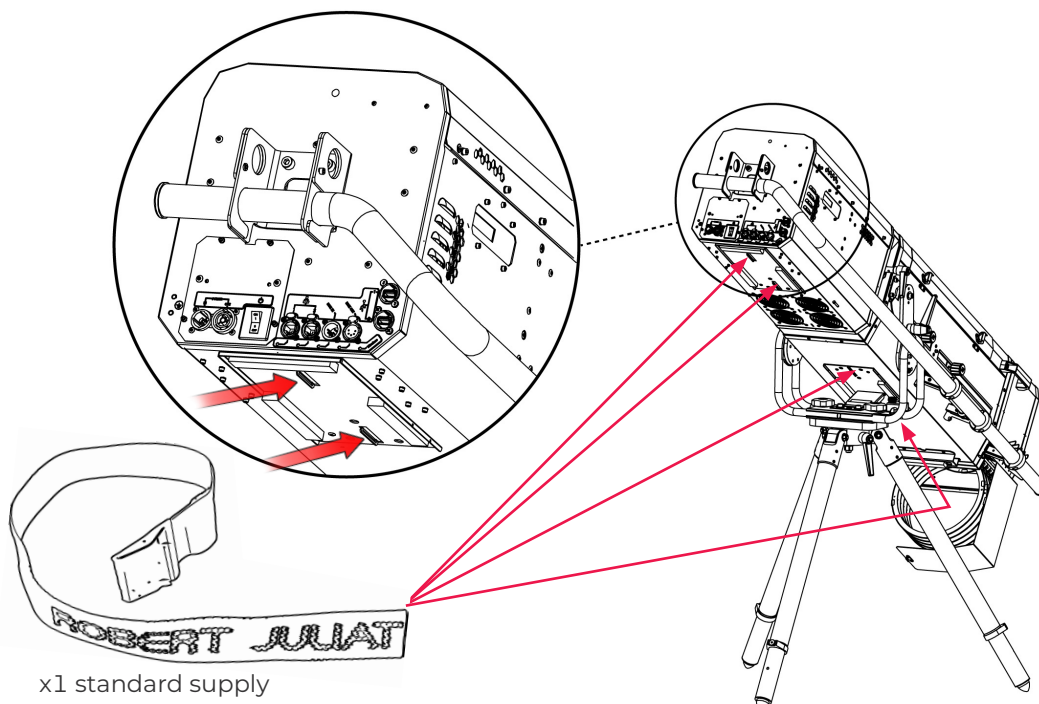


3.4.11 Flight-case (option)

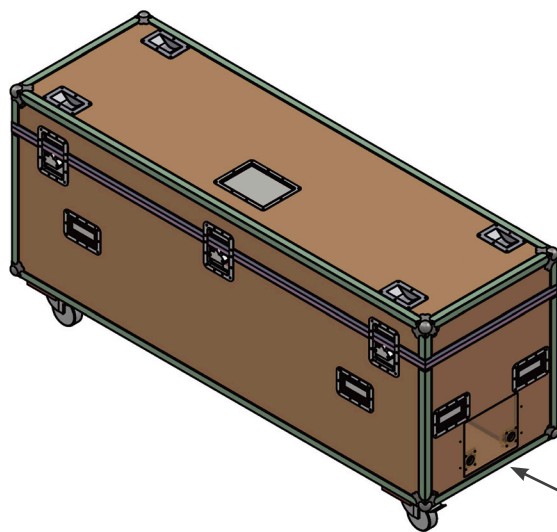

GT4000 stand compartment

Inner side view

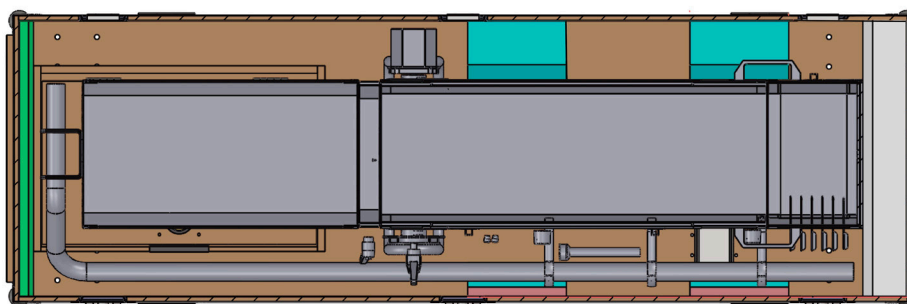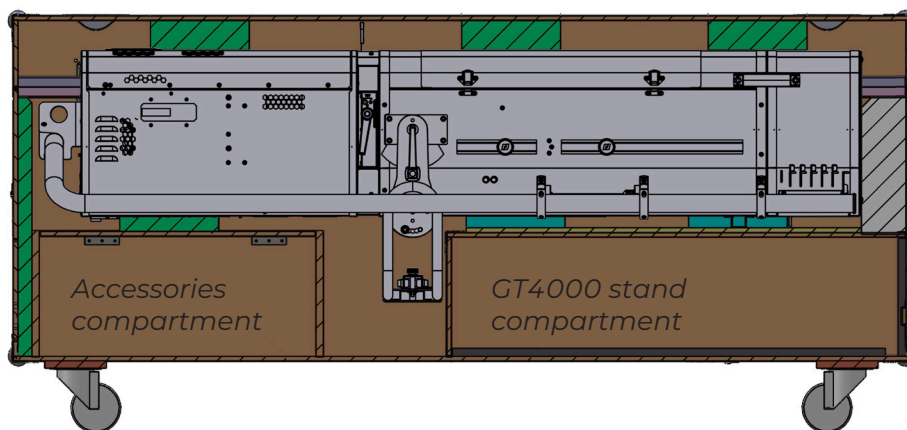

Inner overhead view

4.1 Light intensity

4.1.1 Range



4.1.2 Control

Locally via Standalone mode (default mode)

DMX not activated

→ See 5.3 Home Values

Default Home Values:

- Dimmer @0
- Master dimmer @Full

Remotely with DMX / Art-Net /sACN / DUAL protocols

→ selection in DATA MODE / PROTOCOL

Or

And

HTP mode (Highest Takes Precedence):
Light output is the highest value

Local control - control handle

(1014TC & 1014TCLT)

→ See 5.6 Local potentiometer


(1014 & 1014LT)

4.1.3.1 Dimming resolution - DMX only

Resolution	DMX mode
8 bits – 255 steps	1 - 3 - 5
16 bits – 65 535 steps	2 - 4 - 6

4.1.3.2 Dimming curve


➔ selection in SETUP / DIMMER / CURVE menu: LINEAR or SQUARE

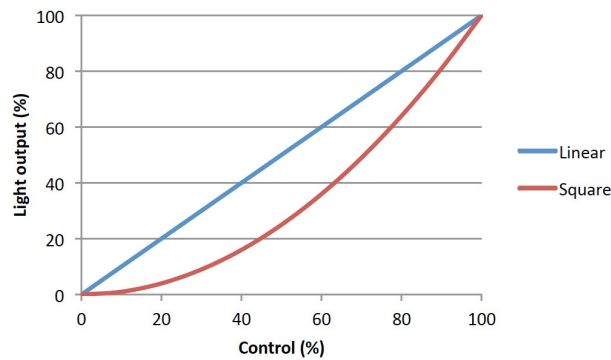

4.1.3.3 Master control


➔ DMX Mode 5 / 6

In order to supervise the operator from the console, master control DMX channel can be used. This channel limits the maximum value of the dimmer shutter. By using this function, it is possible to obtain synchronised fades with several spots or to give intensity limits (minimum and maximum) to the operator. Master is only active when DMX is detected.

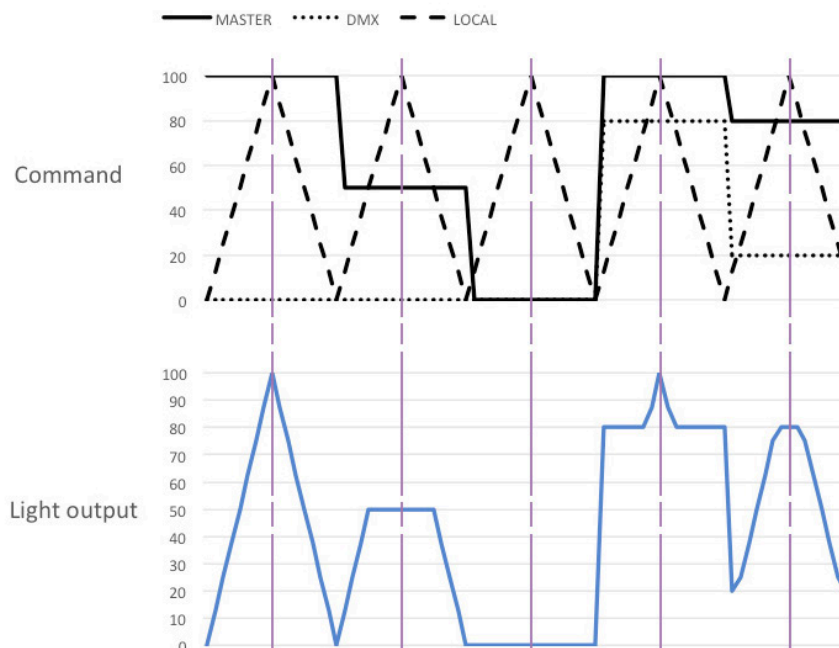

4.1.3.4 Set maximum position

➔ Selection in SETUP / DIMMER / MAX menu

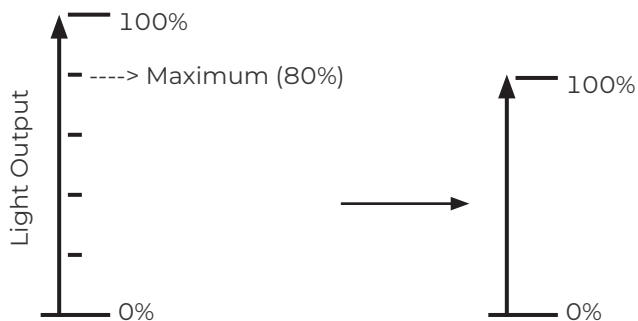


4.1.3.5 Dimming mode

➔ Selection in SETUP / DIMMER / DIMMING MODE menu


Mode	Result
Without PWM	Flicker-Free, perfect for filming
PWM 20 KHz	Good dimming quality (Default Value)
PWM 3,2 KHz	Very good dimming

4.2 Strobe

4.2.1 Range

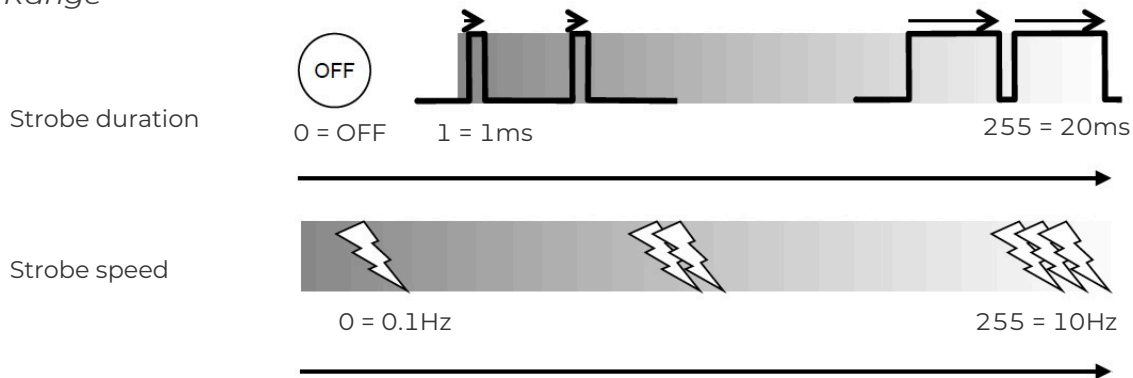


4.2.2 Control

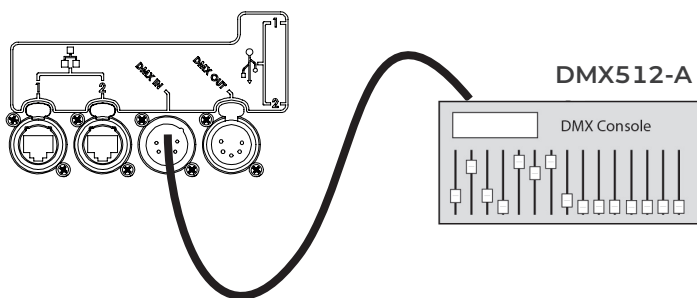


➔ Remotely with DMX512-A / Art-Net / sACN / Dual protocols Mode 3 – 4 – 5 – 6

4.3 Response time


4.3.1 Range

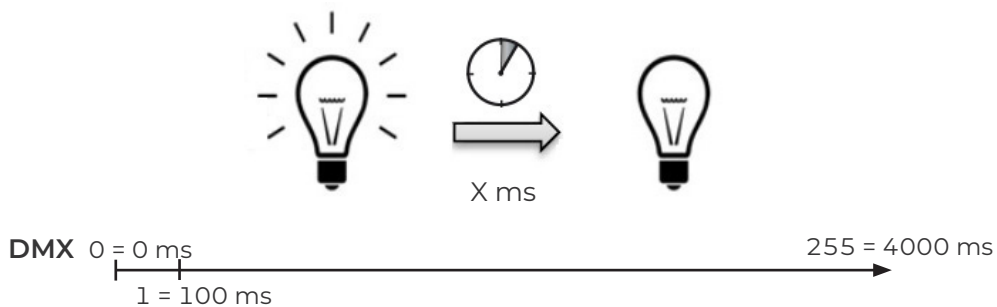

4.3.2 Control

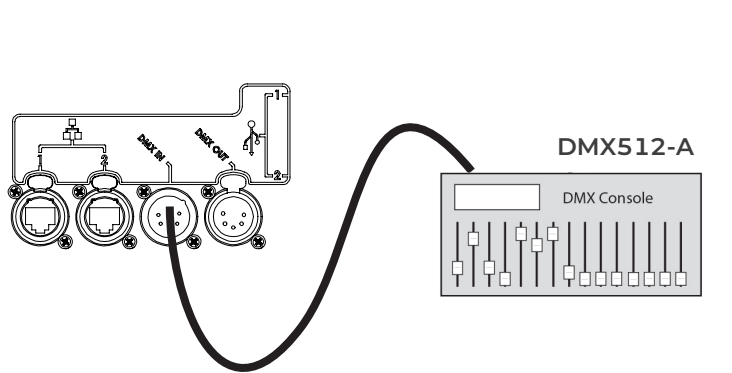

→ Remotely with
DMX512-A / Art-Net / sACN / Dual protocols
Mode 3 - 4 - 5 - 6

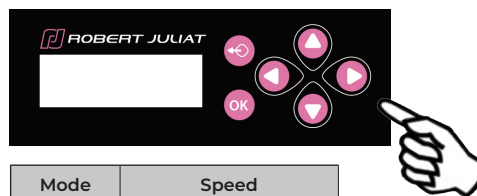


Mode	Speed
RAW	OFF
SLOW	700 ms
MEDIUM	470 ms
FAST	350 ms
CUSTOM	0 - 4000 ms

→ STANDALONE
or
DMX512-A / Art-Net / sACN / Dual protocols
Mode 1 & 2
→ selection in
SETUP / DIMMER / RESPONSE TIME
(or HOME VALUE)






4.4 Beam size adjustment

4.4.1 Range

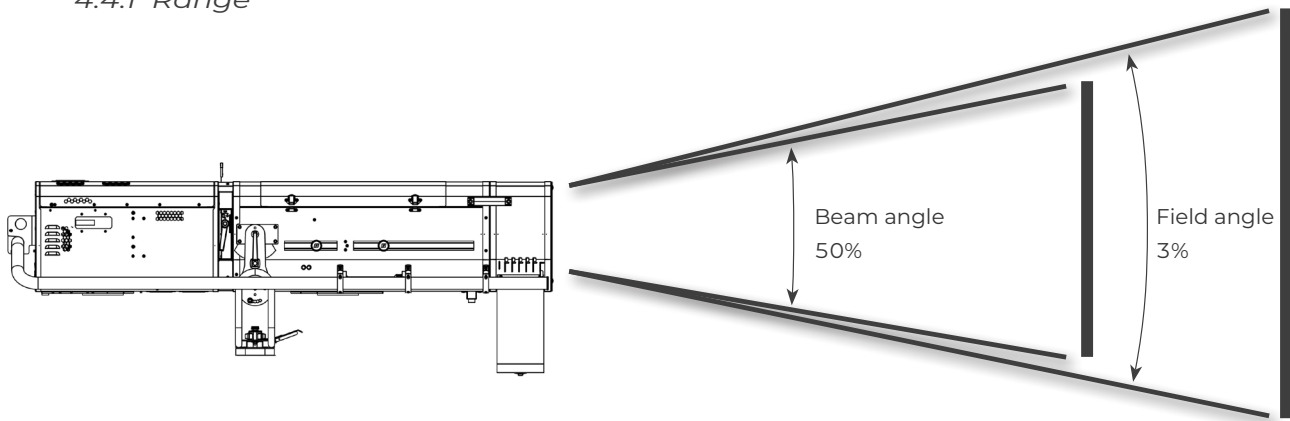

Model	Angles	Minimum angle	Maximum angle
ARTHUR 1014 & 1014TC	Beam angle	5.4°	13.2°
	Field angle	5.8°	13.6°
ARTHUR 1014LT & 1014TCLT	Beam angle	4.1°	10°
	Field angle	4.5°	10.6°



4.4.2 Control

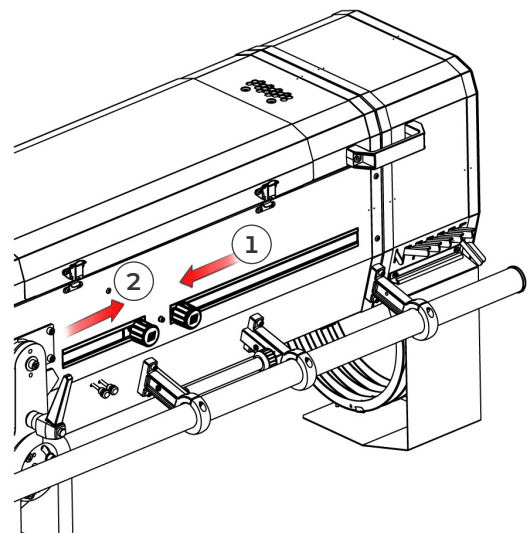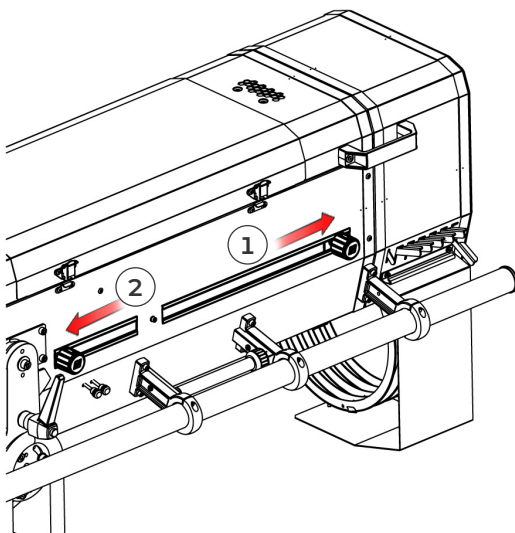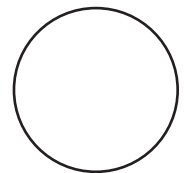


4.5 Pan / Tilt



4.5.1 Range

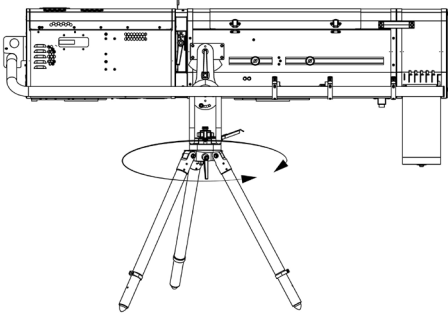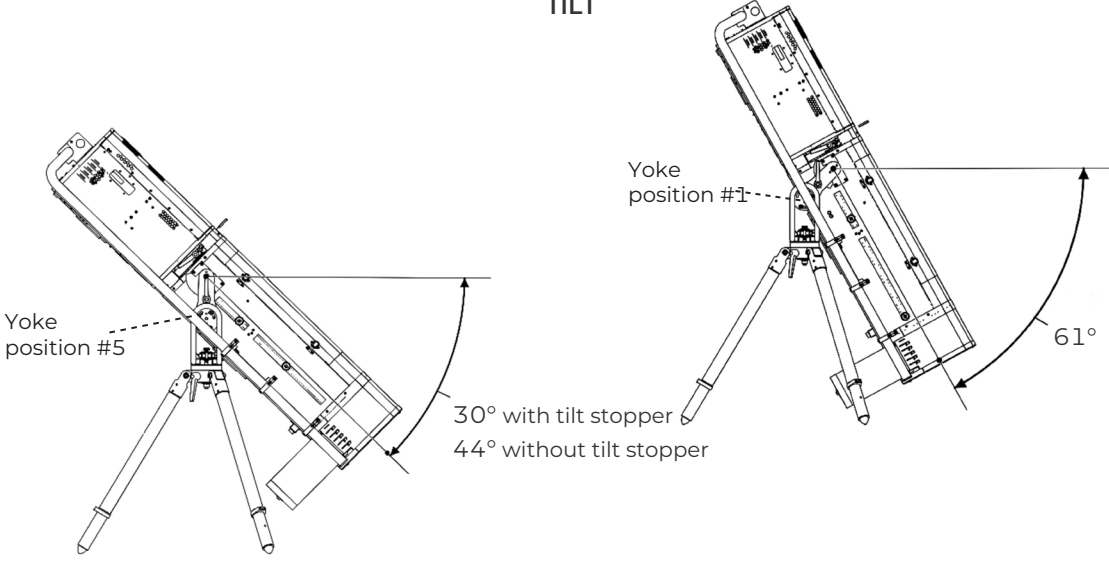Function	Range
<p data-bbox="571 322 628 344">PAN</p> 	<p data-bbox="1129 497 1264 519">0 → 360°</p>
<p data-bbox="868 712 925 734">TILT</p> 	


4.5.2 Control

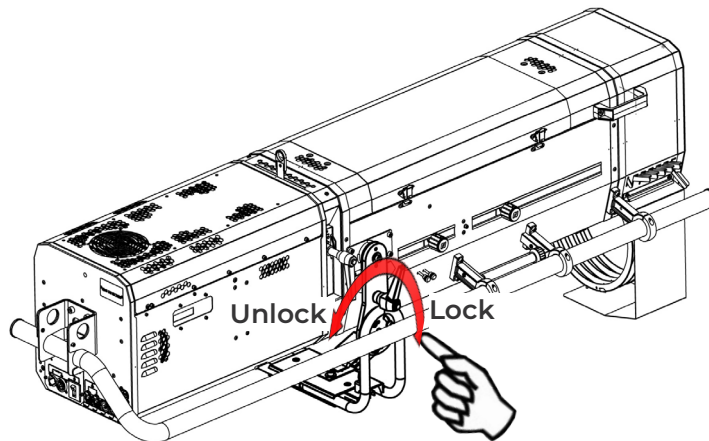


4.6 Iris

4.6.1 Range

- Irising

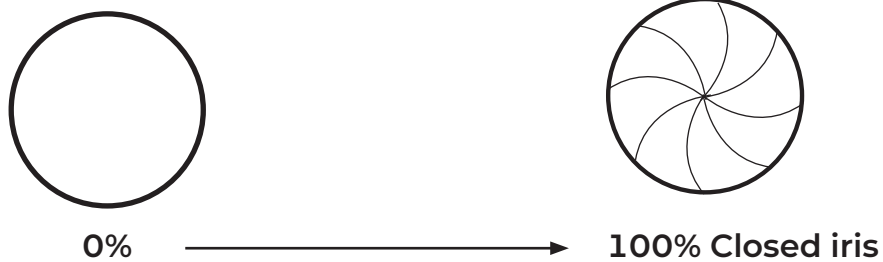

4.6.2 Control

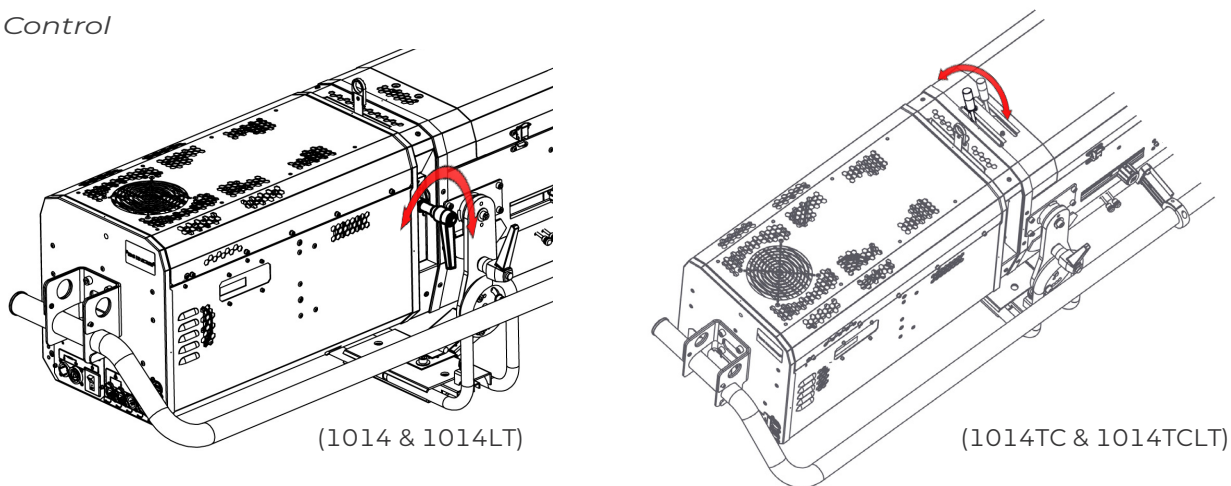


4.7 Gobo

4.7.1 Range


Type	Standard gobo - A size	Standard gobo - B size (for LT version)
Dimensions	<p>Ø100 mm</p> <ul style="list-style-type: none"> • Metal • Glass 	<p>Ø86 mm</p> <ul style="list-style-type: none"> • Metal • Glass
Installation	See section: 3.4.4	

4.7.2 Control

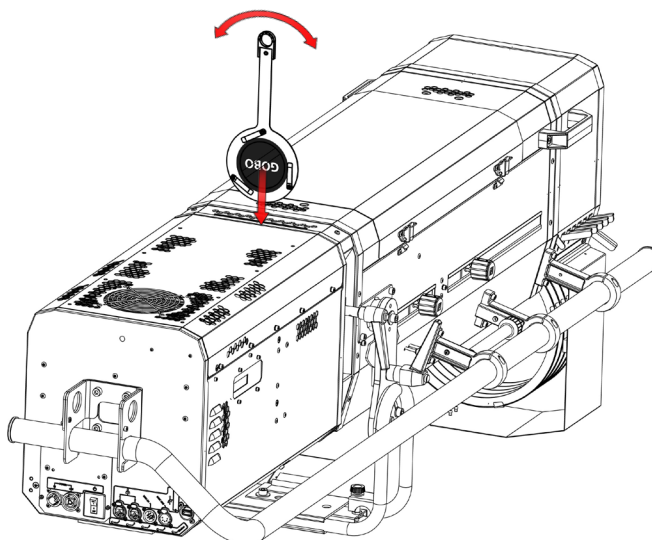


4.8 Colour

4.8.1 Range

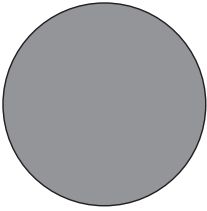Type	Coloured gel filter
Dimension	$\text{Ø}270 \text{ mm}$ 
Installation	<i>See section: 3.4.2 & section 3.4.3</i> Place dark colours towards the front end.


4.8.2 Control

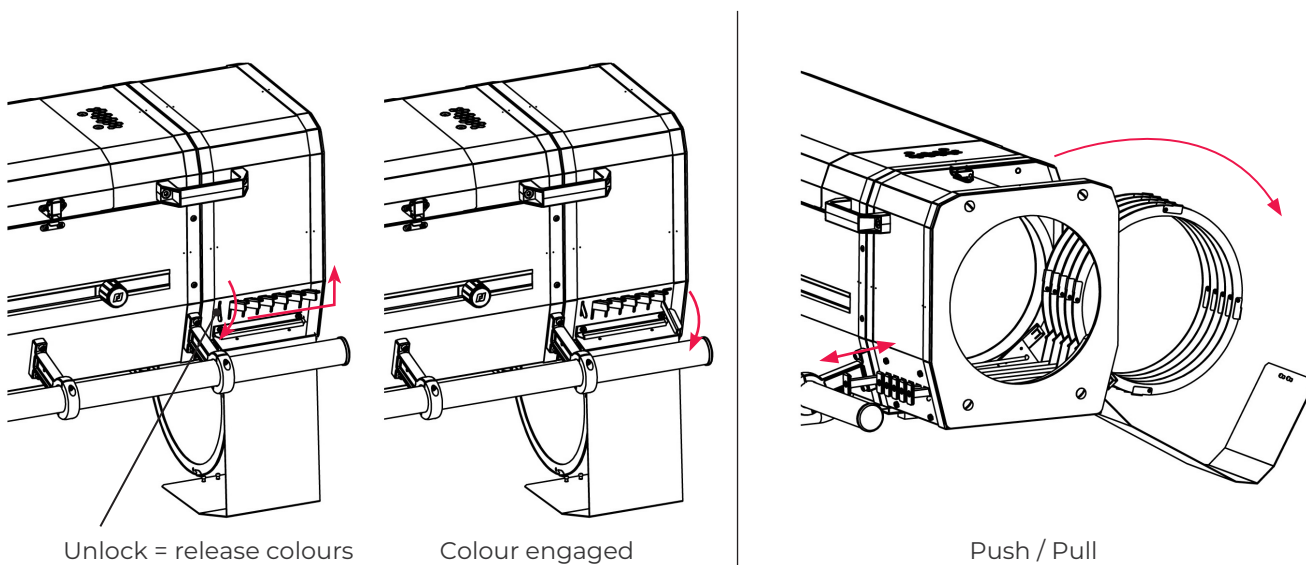


4.9 Frost and correction filters



4.9.1 Range

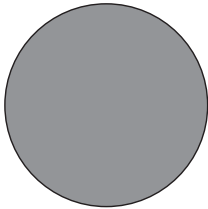
Type	Frost or Correction filter
Dimension	<p>Ø120 mm</p> 
Installation	See section: 3.4.5

4.9.2 Control

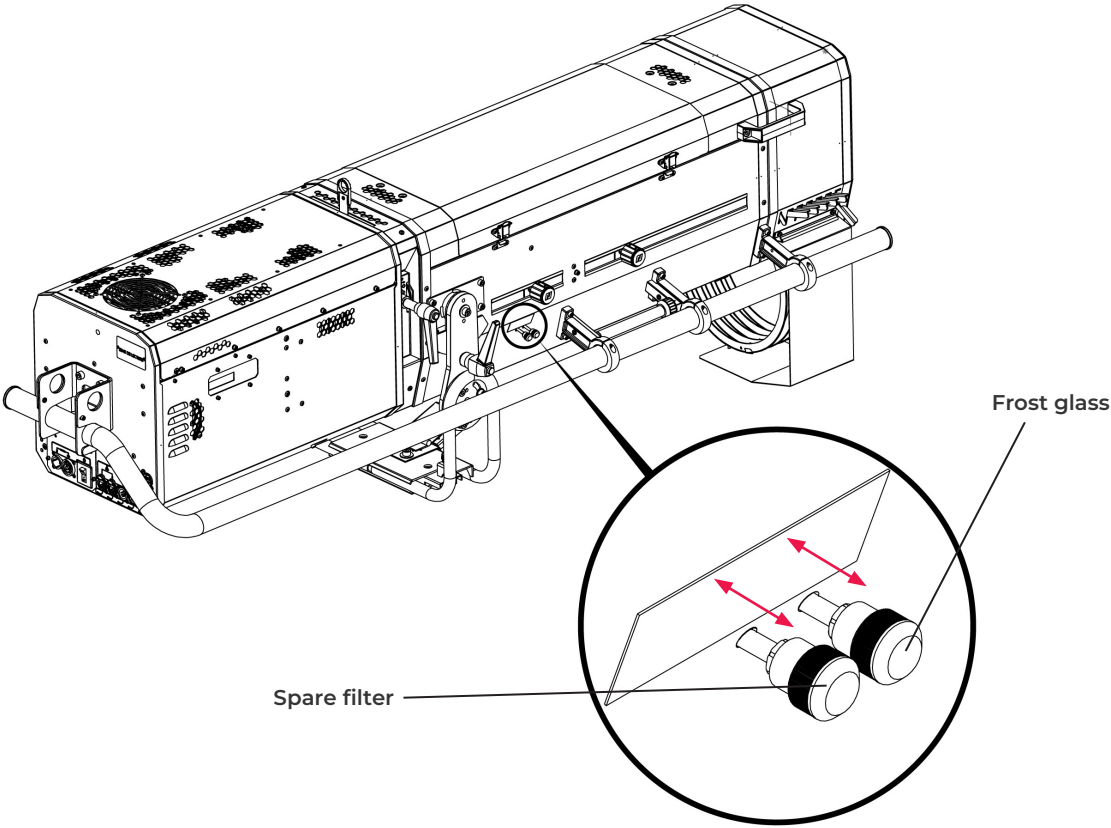

5.1 Local display and controls

5.1.1 Display

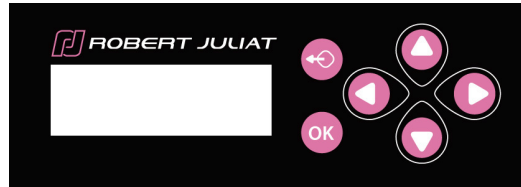


Function	
	Exit the current menu option and/or go back
	Enter the current menu option and/or valid
	Scroll through menus and/or Increase data value
	Scroll through menus and/or Decrease data value
	Scroll through menus and/or Increase data value
	Scroll through menus and/or Decrease data value





5.1.2 Home screen

Display	Mode	Description
	Home	Main display (home screen)
	 x1 push	Diagnostics
	 x1 push	Network information

5.1.3 Menu

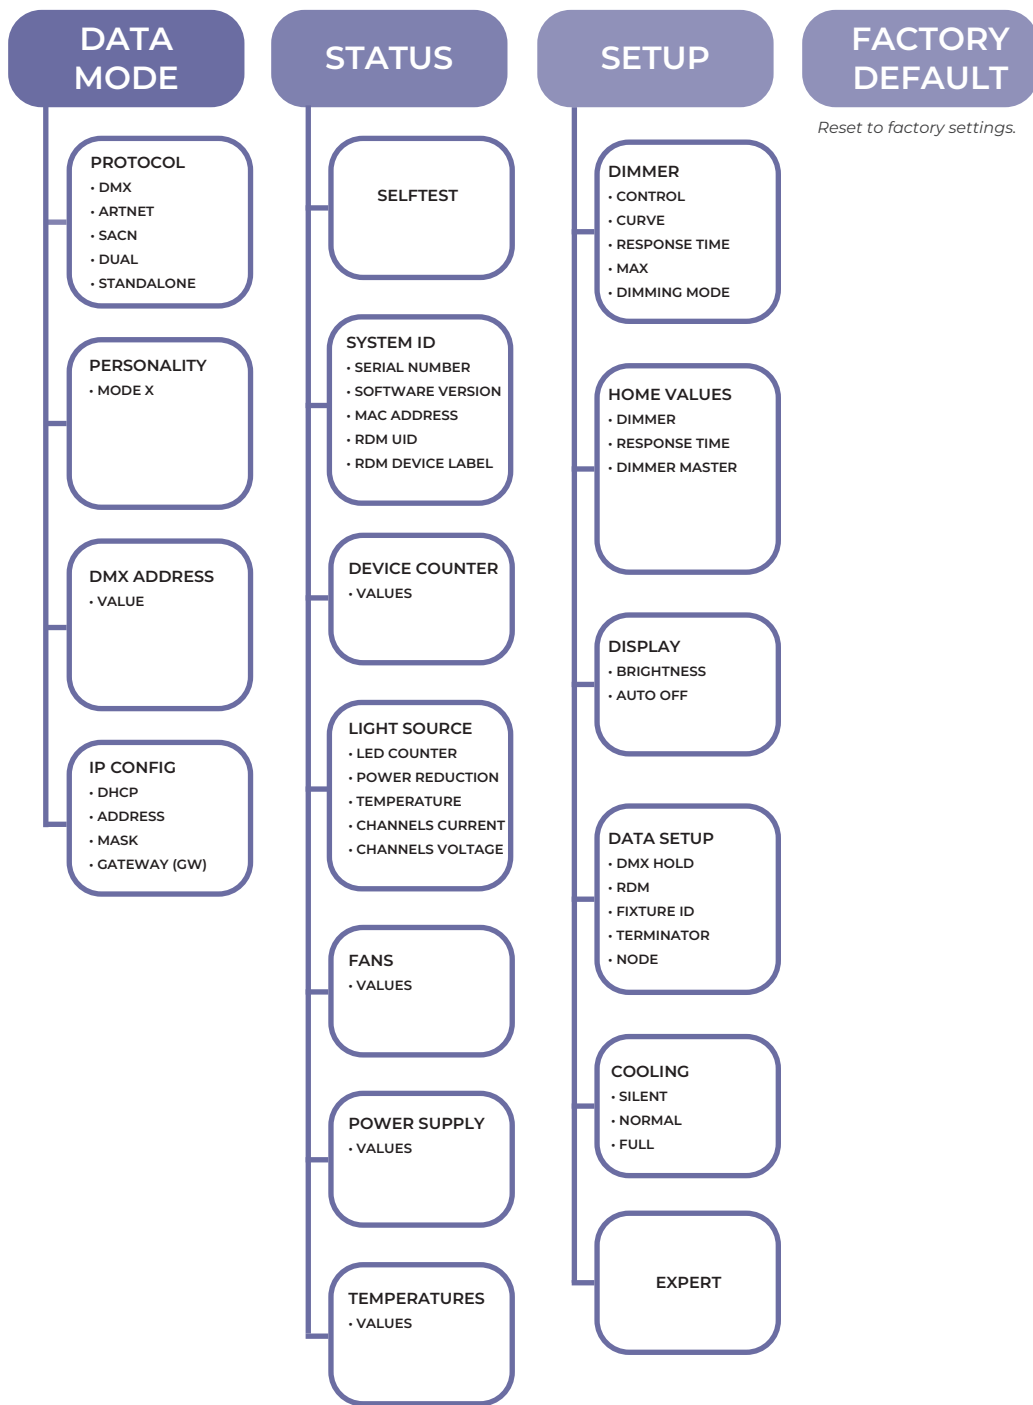

→ Selection in menu: SETUP / DISPLAY

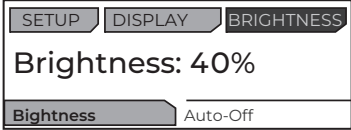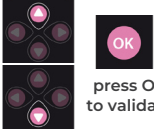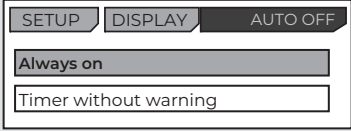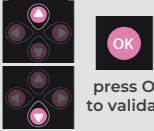Display	Function	Description
	<p>Brightness</p>	<p>Adjust the intensity of the screen</p> <p>To change value, press buttons:</p>  <p>press OK to validate</p>
	<p>Auto-OFF</p>	<p>To keep the main display (home screen) always ON, select :</p> <p>Always ON AUTO OFF AUTO OFF ONLY WARNINGS</p>  <p>press OK to validate</p> <p>Main display turns OFF after 20 seconds</p>



5.2 DMX512 - A remote control



5.2.1 Protocol


E1.11 - 2008, USITT DMX512-A

5.2.2 Configuration

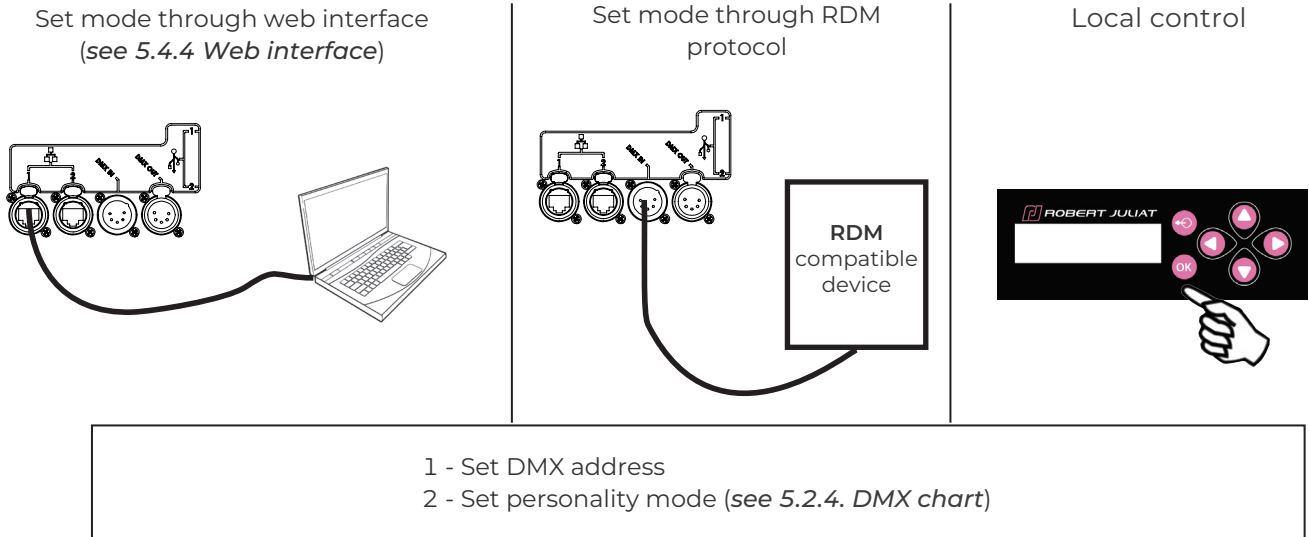

Caution:


Activate DMX in protocol mode beforehand.

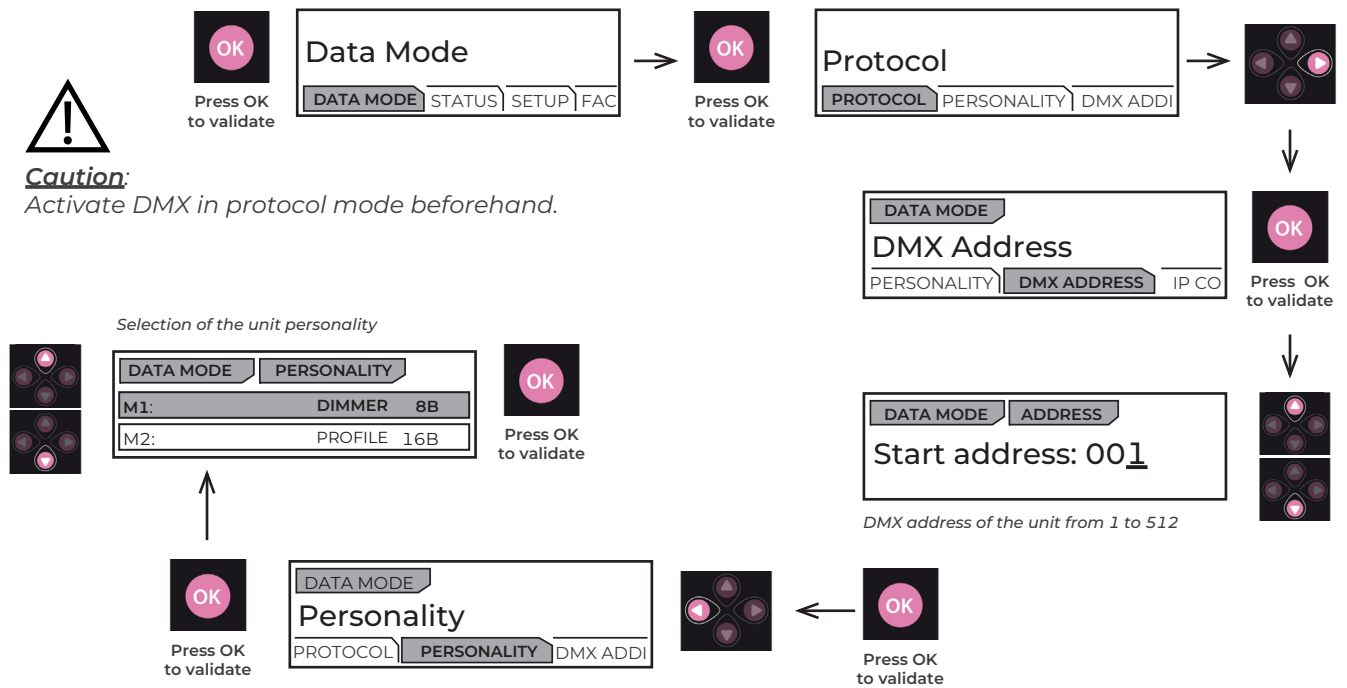

5.2.3 Parameters

5.2.3.1 DMX Hold

→ Selection in SETUP / Data Setup / DMX HOLD menu

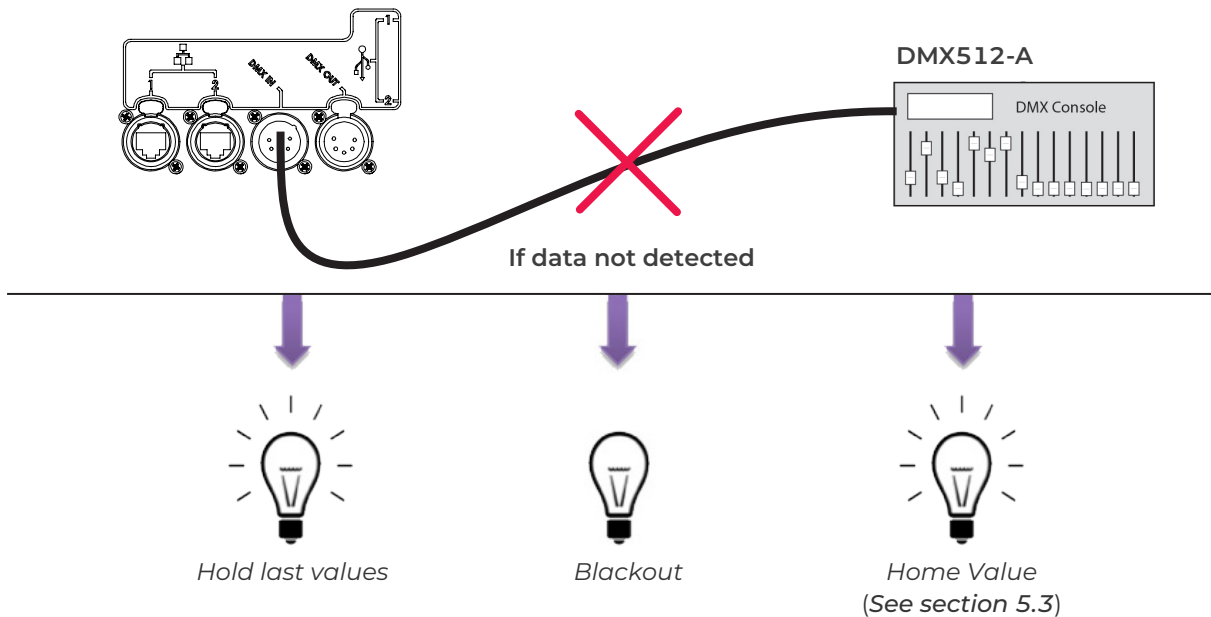

5.2.3.2 Fixture ID

→ Selection in SETUP / DATA SETUP / FIXTURE ID menu

Fixture ID can be set through web interface or RDM protocol or local control

Each unit can be identified by a Fixture ID number
 – Once defined, the Fixture ID is displayed on the Home screen.

Example: Installation with 6 units						
Home screen information	ID1 @ 101	ID2 @ 123	ID3 @ 145	ID4 @ 167	ID5 @ 189	ID6 @ 211
Fixture ID	1	2	3	4	5	6
DMX address	101	123	145	167	189	211

5.2.3.3 Terminator

Mode: Auto

A resistor of 120R is automatically connected to terminate the DMX line as the RS485 standard specifies.

5.2.3.4 Node

On sACN/ArtNet/Dual mode we have the possibility to transmit a DMX/RDM signal protocol on the DMX port (Output). The selection can be done through the menu/Webpage/RDM.

On Dual mode (sACN/ArtRdm) the node feature is automatically selected.

DMX Channel	Mode 1: Dimmer8B	Mode 2: Dimmer16B	Mode 3: Profile8B	Mode 4: Profile16b	Mode 5: Followspot8b	Mode 6: Followspot16b
1	Dimmer	Dimmer	Dimmer	Dimmer	Dimmer	Dimmer
2		Dimmer fine	Strobe duration	Dimmer fine	Master	Dimmer fine
3			Strobe speed	Strobe duration	Strobe duration	Master
4			Response time	Strobe speed	Strobe speed	Master fine
5			Control mode	Response time	Response time	Strobe duration
6				Control mode	Control mode	Strobe speed
7						Response time
8						Control mode

5.2.5 DMX ranges

5.2.5.1 Strobe duration

Range min	Range max	Function
0	0	Strobe OFF
1	255	Strobe ON - 1 ms → 20 ms

5.2.5.2 Strobe speed

Range min	Range max	Function
0	255	Frequency: 0,1 Hz → 10 Hz

5.2.5.3 Response time

Range min	Range max	Function
0	0	470 ms (medium)
1	255	Response time: 0 s → 4 s

Range min	Range max	Function
0	0	-
1	10	RDM OFF
11	20	RDM ON
21	30	Fixture Reset
31	40	Dimmer Curve Linear
41	50	Dimmer Curve Square
51	60	Not used
61	70	Not used
71	80	Not used
81	90	Not used
91	100	Not used
101	110	Cooling mode: Silent
111	120	Cooling mode: Normal
121	130	Cooling mode: Full power
131	255	Not used

(*) Function activated after 5 seconds - needs to go back to zero to activate second function.

5.2.6.1 Protocol

ANSI E1.20 – 2010 / ANSI E1.37 - 1 / ANSI E1.37 - 2

For more information about RDM protocol: <http://www.rdmprotocol.org/>

5.2.6.2 Functions

PID	Description	Standard	Get	Set	Queued_Message	Ack_Timer	VERSION
							5.00
Network Management							
00 01	DISCOVERY_UNIQUE_BRANCH	E1.20					✓
00 02	DISCOVERY_MUTE	E1.20		✓			✓
00 03	DISCOVERY_UNMUTE	E1.20		✓			✓
00 15	COMMUNICATION_STATUS	E1.20	✓	✓			✓
Status Collection							
00 20	QUEUED_MESSAGE	E1.20	✓				✓
00 30	STATUS_MESSAGES	E1.20	✓				✓
00 31	STATUS_ID_DESCRIPTION	E1.20	✓				✓
00 32	CLEAR_STATUS_ID	E1.20		✓			✓
00 33	QUEUED_MESSAGE_SENSOR_SUBSCRIBE	E1.20-2023	✓	✓			
RDM Information							
00 50	SUPPORTED_PARAMETERS	E1.20	✓				✓
00 51	PARAMETER_DESCRIPTION	E1.20	✓				✓
Product Information							
00 60	DEVICE_INFO	E1.20	✓			✓	✓
00 70	PRODUCT_DETAIL_ID_LIST	E1.20	✓				✓
00 80	DEVICE_MODEL_DESCRIPTION	E1.20	✓				✓
00 81	MANUFACTURER_LABEL	E1.20	✓				✓
00 82	DEVICE_LABEL	E1.20	✓	✓	✓	✓	✓
00 90	FACTORY_DEFAULTS	E1.20	✓	✓		✓	✓
00 C0	SOFTWARE_VERSION_LABEL	E1.20	✓			✓	✓
00 C2	BOOT_SOFTWARE_VERSION_LABEL	E1.20	✓				✓
DMX512 Setup							
00 E0	DMX512_PERSONALITY	E1.20	✓	✓	✓	✓	✓
00 E1	DMX512_PERSONALITY_DESCRIPTION	E1.20	✓				✓
00 F0	DMX512_STARTING_ADDRESS	E1.20	✓	✓	✓	✓	✓
01 20	SLOT_INFO	E1.20	✓				✓
01 21	SLOT_DESCRIPTION	E1.20	✓				✓
Sensors							
02 00	SENSOR_DEFINITION	E1.20	✓				✓
02 01	SENSOR_VALUE	E1.20	✓				✓
Dimmer Settings							
03 40	DIMMER_INFO	E1.37-1	✓				✓
03 42	MAXIMUM_LEVEL	E1.37-1	✓	✓	✓	✓	✓
03 43	CURVE	E1.37-1	✓	✓	✓	✓	✓
03 44	CURVE_DESCRIPTION	E1.37-1	✓				✓
03 45	OUTPUT_RESPONSE_TIME	E1.37-1	✓	✓	✓	✓	✓
03 46	OUTPUT_RESPONSE_TIME_DESCRIPTION	E1.37-1	✓				✓
03 47	MODULATION_FREQUENCY	E1.37-1	✓	✓	✓	✓	✓
03 48	MODULATION_FREQUENCY_DESCRIPTION	E1.37-1	✓				✓
Power / Lamp Settings							
04 00	DEVICE_HOURS	E1.20	✓				✓
04 01	LAMP_HOURS	E1.20	✓	✓			✓
Display Settings							
05 01	DISPLAY_LEVEL	E1.20	✓	✓	✓	✓	✓

PID	Description	Standard	Get	Set	Queued_Message	Ack_Timer	SULLY 5.00
Control							
10	00	IDENTIFY_DEVICE	E1.20	✓	✓	✓	✓
10	01	RESET_DEVICE	E1.20		✓	✓	✓
10	20	PERFORM_SELFTEST	E1.20	✓	✓	✓	✓
10	21	SELF_TEST_DESCRIPTION	E1.20				✓
RDMnet Management							
07	00	LIST_INTERFACES	E1.37-2	✓			✓
07	01	INTERFACE_LABEL	E1.37-2	✓			✓
07	02	INTERFACE_HARDWARE_ADRESS_TYPE1	E1.37-2	✓			✓
07	03	IPV4_DHCP_MODE	E1.37-2	✓	✓	✓	✓
07	05	IPV4_CURRENT_ADDRESS	E1.37-2	✓		✓	✓
07	06	IPV4_STATIC_ADDRESS	E1.37-2	✓	✓		✓
07	09	INTERFACE_APPLY_CONFIGURATION	E1.37-2		✓		✓
07	0A	IPV4_DEFAULT_ROUTE	E1.37-2	✓	✓	✓	✓
07	0B	DNS_IPV4_NAME_SERVER	E1.37-2	✓	✓	✓	✓
PID Manufacturer							
85	58	SELFTEST_RESULT	E1.20	✓			✓
85	59	CURRENT_IP_ADDRESS	E1.20	✓		✓	✓
85	5A	CURRENT_NETMASK	E1.20	✓		✓	✓
85	5B	CURRENT_DRIVER_STATUS	E1.20	✓		✓	✓
85	5C	CUSTOM_RESPONSE_TIME_DESCRIPTION	E1.20	✓			✓
85	5D	CUSTOM_RESPONSE_TIME_VALUE	E1.20	✓	✓	✓	✓
85	60	DATA_MODE_DESCRIPTION	E1.20	✓			✓
85	61	DATA_MODE_VALUE	E1.20	✓	✓	✓	✓
85	62	STANDALONE_VALUE_DESCRIPTION	E1.20	✓			✓
85	63	STANDALONE_VALUE	E1.20	✓	✓	✓	✓
85	64	SACN_UNIVERSE_VALUE_DESCRIPTION	E1.20	✓			✓
85	65	SACN_UNIVERSE_VALUE	E1.20	✓	✓	✓	✓
85	66	ARTNET_UNIVERSE_VALUE_DESCRIPTION	E1.20	✓			✓
85	67	ARTNET_UNIVERSE_VALUE	E1.20	✓	✓	✓	✓
85	68	SERIAL_DESCRIPTION	E1.20	✓			✓
85	69	SERIAL	E1.20	✓	✓	✓	✓
85	6A	DMX_HOLD_DESCRIPTION	E1.20	✓			✓
85	6B	DMX_HOLD	E1.20	✓	✓	✓	✓
85	6C	COMMAND_LOCK_DESCRIPTION	E1.20	✓			✓
85	6D	COMMAND_LOCK_VALUE	E1.20	✓	✓	✓	✓
85	6E	DRIVER_CALIBRATE_DESCRIPTION	E1.20	✓			✓
85	6F	DRIVER_CALIBRATE_VALUE	E1.20	✓	✓	✓	✓
85	70	NODE_DESCRIPTION	E1.20	✓			✓
85	71	NODE_VALUE	E1.20	✓	✓	✓	✓
85	72	TERMINATOR_DESCRIPTION	E1.20	✓			✓
85	73	TERMINATOR	E1.20	✓	✓	✓	✓
85	74	DMX_ERROR_COUNTER_DESCRIPTION	E1.20	✓			✓
85	75	DMX_ERROR_COUNTER	E1.20	✓	✓	✓	✓

5.3 Home values

“Home values” represent a selection of values manually entered into the device via the keypad to produce a defined state.

These Home values can be set in the following modes:

Parameters / control modes	Dimmer8B Mode 1	Dimmer16B Mode 2	Profile8B Mode 3	Profile16B Mode 4	Followspot8B Mode 5	Followspot16B Mode 6	Standalone*
Dimmer	DMX	DMX	DMX	DMX	DMX	DMX	HOME VALUE
Response time	HOME VALUE	DMX	DMX	DMX	DMX	DMX	HOME VALUE
Dimmer Master	HOME VALUE	HOME VALUE	DMX	DMX	DMX	DMX	HOME VALUE

If the function is not controlled by DMX, the Home value is automatically activated.



HTP mode between DMX, local and HOME VALUES

(*) Defines a standalone operating mode in the following cases:

- As default values when used without data Data mode → Protocol → Standalone
- As reference values following a data signal loss. Set up → Data set up → DMX hold → Standalone

5.4 Network

Our network stack can handle several flows of protocol at the same time.

Protocol always available:

- Web page to set up parameters - *See section 5.4.4*
- LLRP (Low Level Recovery Protocol) for IP network configuration - *See section 5.4.5*

A selection of Protocols dedicated to lighting:

- Art-Net V4 - *See section 5.4.1*
- sACN - *See section 5.4.2*
- Dual: Sacn + Art-RDM (DMX512 data signal + RDM) - *See section 5.4.3*

From July 2024 the Robert Juliat equipment based on RJ LED2 platform is configured as follows:

- DHCP (**D**ynamic **H**ost **C**onfiguration **P**rotocol - **RFC1531**) ON
→ <https://www.rfc-editor.org/rfc/rfc1531>
- Zeroconf (**Z**ero-**C**onfiguration **N**etworking – **IPv4LL/APIPA – RFC3927**) ON
→ <https://www.rfc-editor.org/rfc/rfc3927>

IP Addressing of Parameters - *See section 5.1.2*

Default:

- At startup, the device's IP address is set to 000.000.000.000 with a subnet mask of 000.000.000.000
- After connecting to the network, the device awaits the assignment of an IP address and subnet mask by the DHCP server.
- If there is no DHCP server, a unique IP address and subnet mask are automatically assigned.
IP : 169.254.XXX.XXX Mask : 255.255.0.0

Most personal computers are configured with DHCP and Zeroconf enabled, so the IP address defaults to 169.254.X.X with a subnet mask of 255.255.0.0.

When connected to a Robert Juliat device, since the IP address/mask range are in the same class, network communication works seamlessly.

This configuration was chosen to make it easier for non-IT technicians.

Static IP;

It's possible to configure a static IP address, but be sure to select a unique IP address with the correct subnet mask.

Configuration can be done via the Web Page, RDM, LLRP, Art-Net, or locally.


Default IP Address:

When DHCP mode is OFF and no static IP address has been selected, the device will default to a Class A IP address of 2.XXX.XXX.XXX with a subnet mask of 255.0.0.0.

This address can be found on a label near the ID plate or by pressing the right arrow on the local control.

Default Settings:

DHCP = OFF
Address = 2.XXX.XXX.XXX
Mask = 255.0.0.0

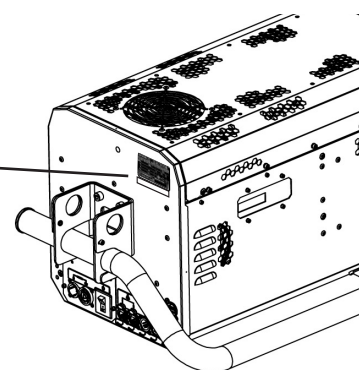

Changing the Controlling Computer's IP Address:

- The IP address and subnet mask of both the fixture and the computer must be on the same network class.
- The computer's IP address must be different.
- Refer to your operating system's support to modify IPv4 settings:
 - Change your IP address on Windows
 - ➔ <https://support.microsoft.com/en-us/windows/change-tcp-ip-settings-bd0a07af-15f5-cd6a-363f-ca2b6f391ace>
 - Change your IP address on Mac
 - ➔ <https://support.apple.com/en-ae/guide/mac-help/mh14129/mac>

Example: Using the fixture's default IP address

- 1 - Computer IP address: 2.2.2.2
- 2 - Computer subnet mask: 255.0.0.0


5.4.1.1 Protocol

Artistic Licence Art-Net v4.


For more information about Art-Net protocol: <http://art-net.org.uk/>

5.4.1.2 Configuration


Set mode through Web interface
(see 5.4.4 Web interface)

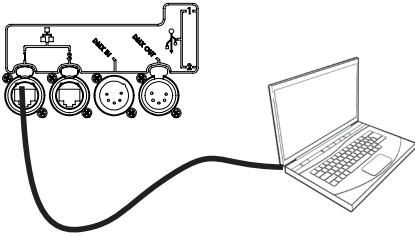

Set mode through RDM
protocol

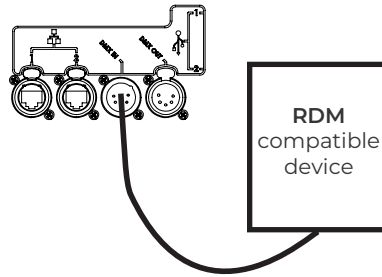

Local control

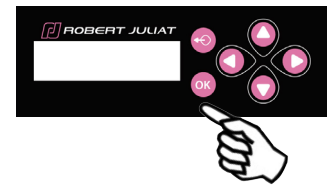


- 1 - If necessary, change IP settings
- 2 - Set Art-Net Universe
- 3 - Set DMX address
- 4 - Set personality mode (see 5.2.4 DMX chart)



Caution:

(*) Activate Art-Net in protocol mode beforehand.

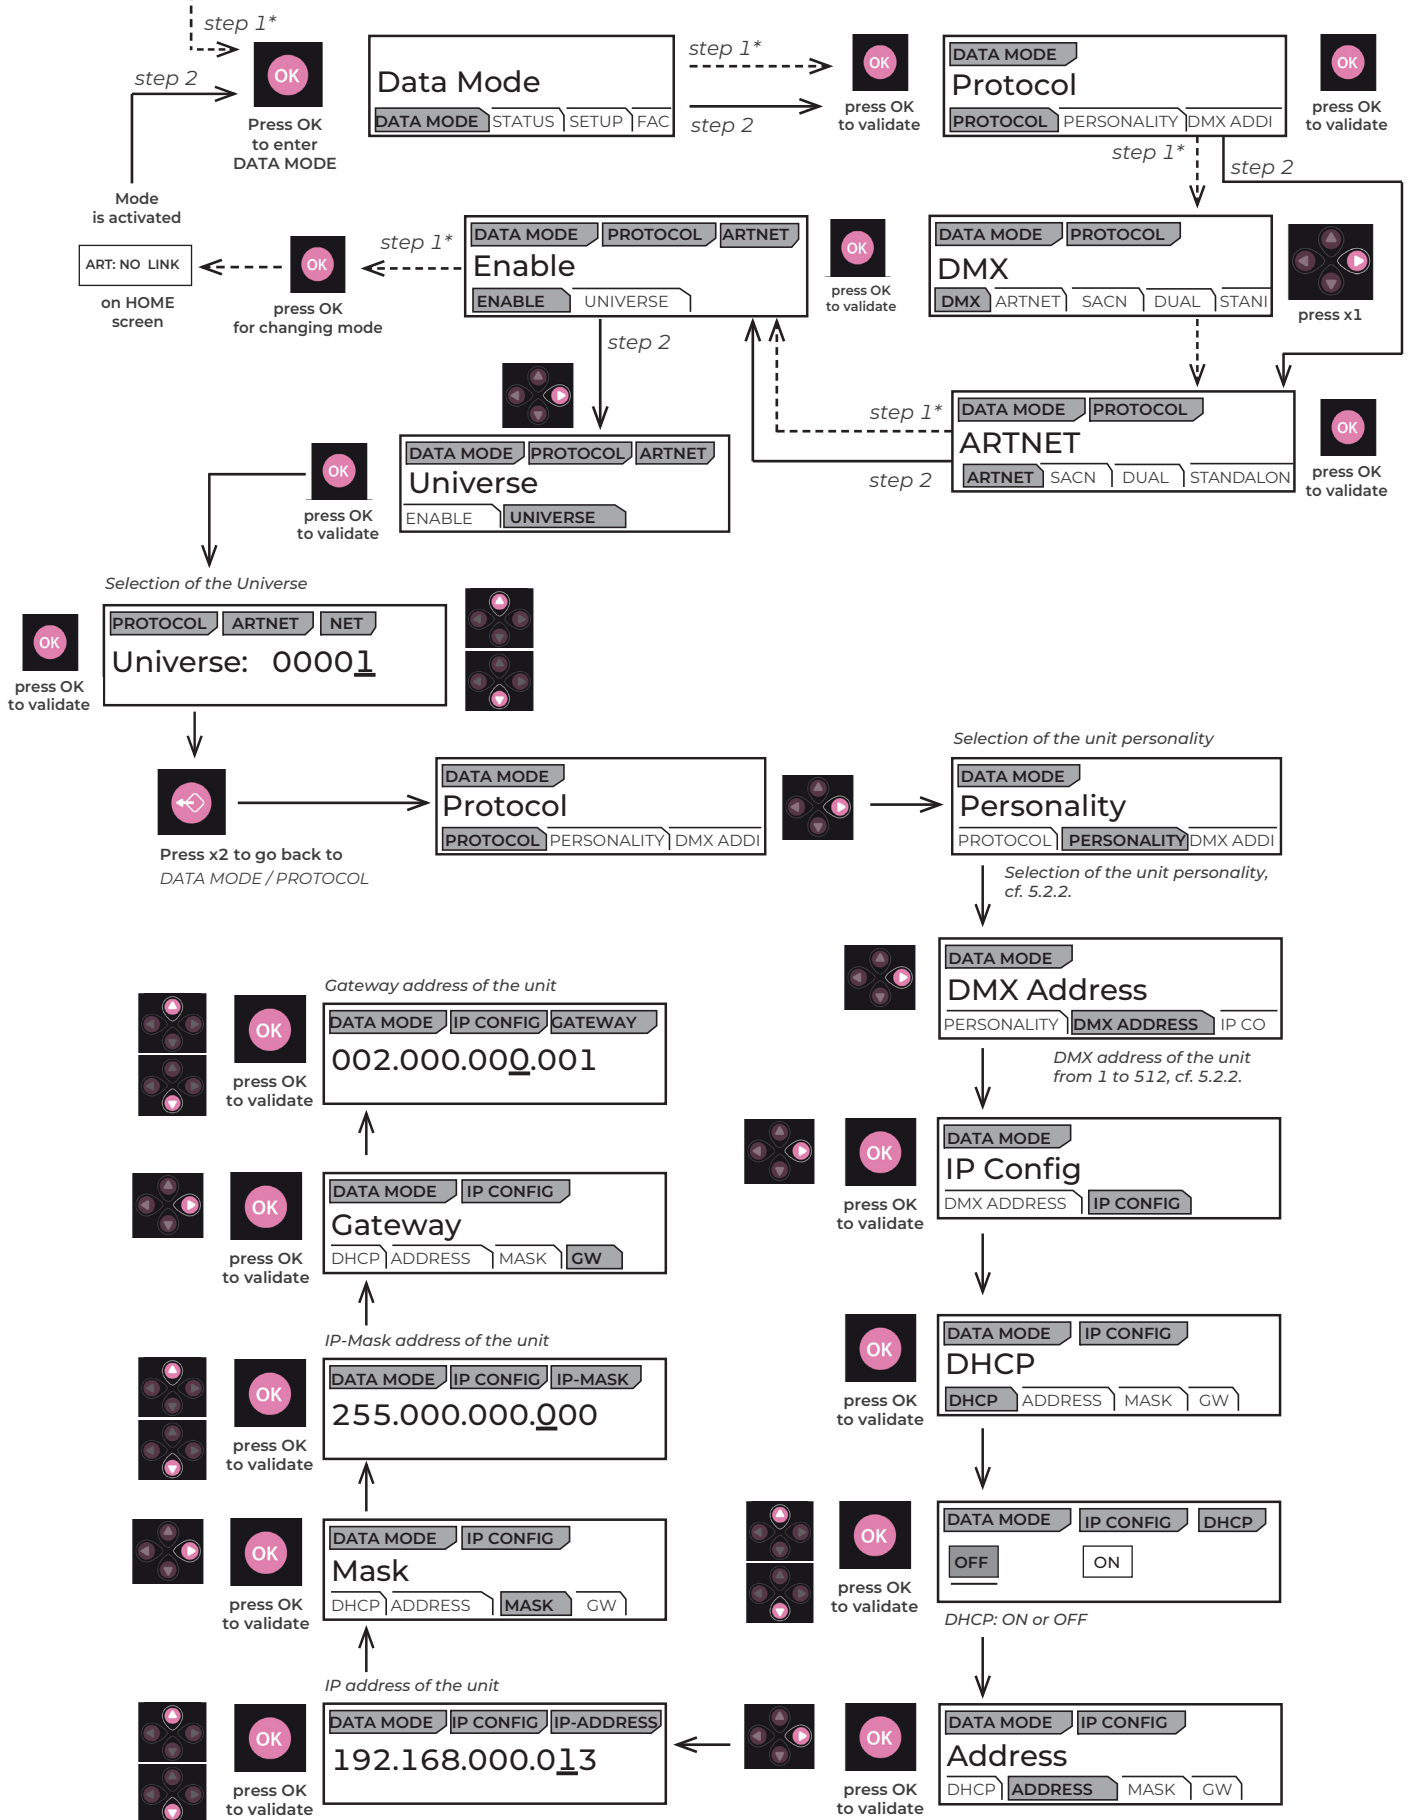


5.4.2.1 Protocol


ANSI E1.31 – 2009 sACN (Streaming-ACN)

5.4.2.2 Configuration

Set mode through Web interface
(see 5.4.4 Web interface)

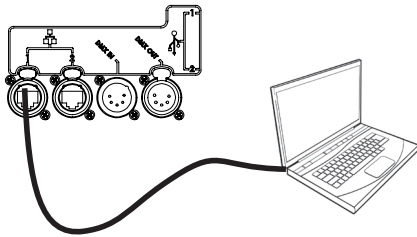

Set through local control

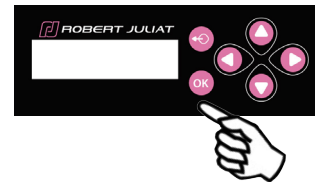


- 1 - If necessary, change IP settings
- 2 - Set sACN universe
- 3 - Set DMX address
- 4 - Set personality mode (see 5.2.4 DMX chart)



Caution:

(*) Activate sACN in protocol mode beforehand.

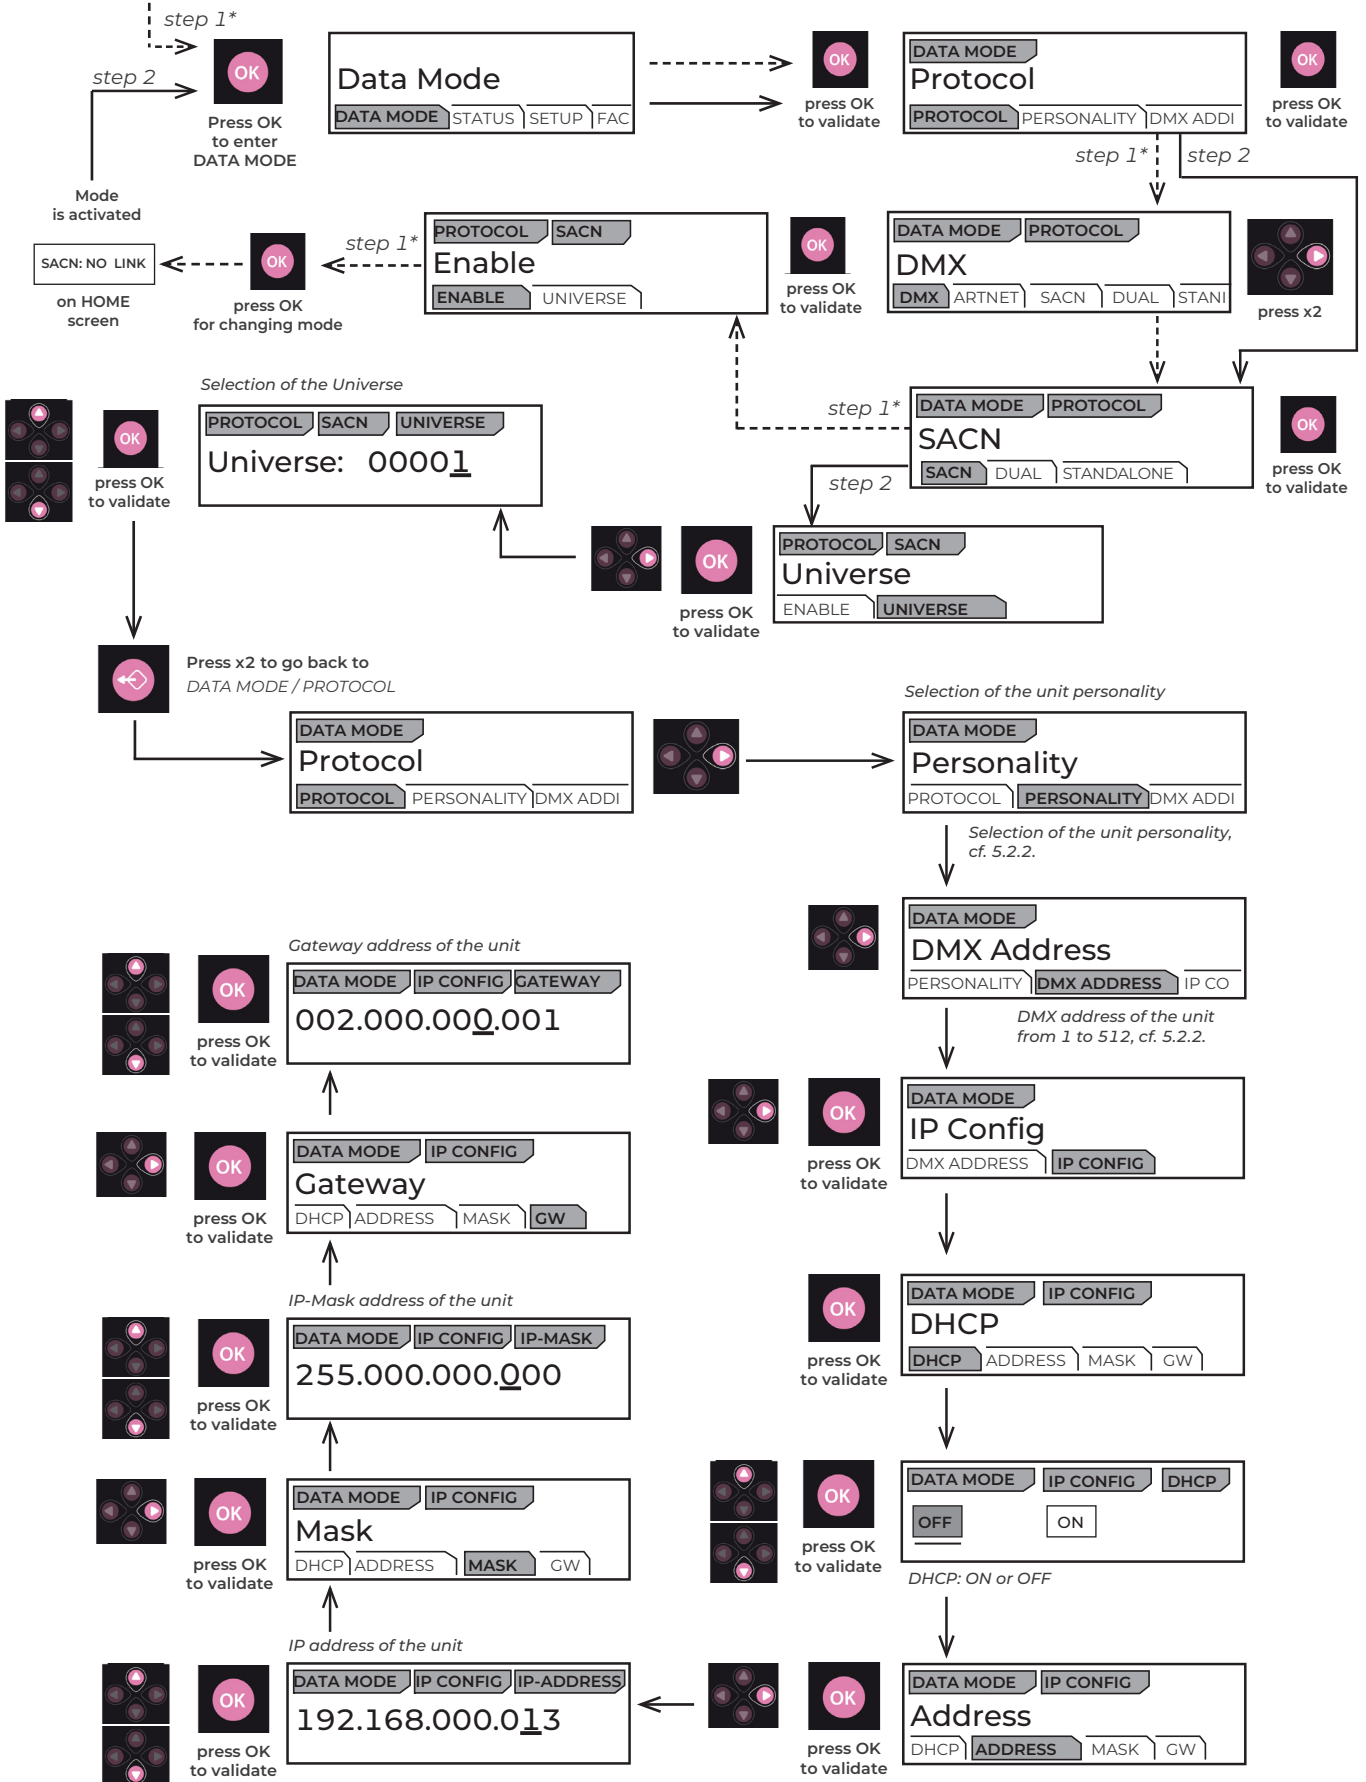

5.4.3.1 Protocol


Dual Mode: Available only on an Ethernet network

It allows to send a DMX 512 signal through a sACN data stream and at the same time to use an Artnet/ArtRdm data stream to control, set and monitor the equipment via RDM.


This mode can be set by Web interface or the local control screen.

5.4.3.2 Configuration

Set mode through Web interface
(see 5.4.4 Web interface)

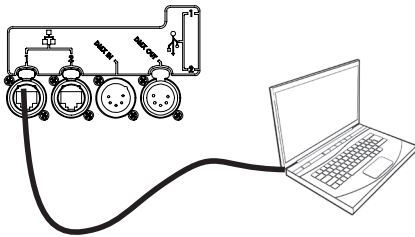

Set through local control

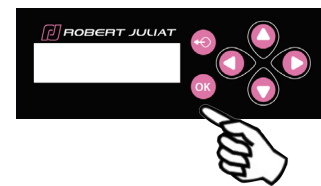


- 1 - If necessary, change IP settings
- 2 - Set DUAL universe
- 3 - Set DMX address
- 4 - Set personality mode (see 5.2.4 DMX chart)




Caution:

(*) Activate DUAL in protocol mode beforehand.

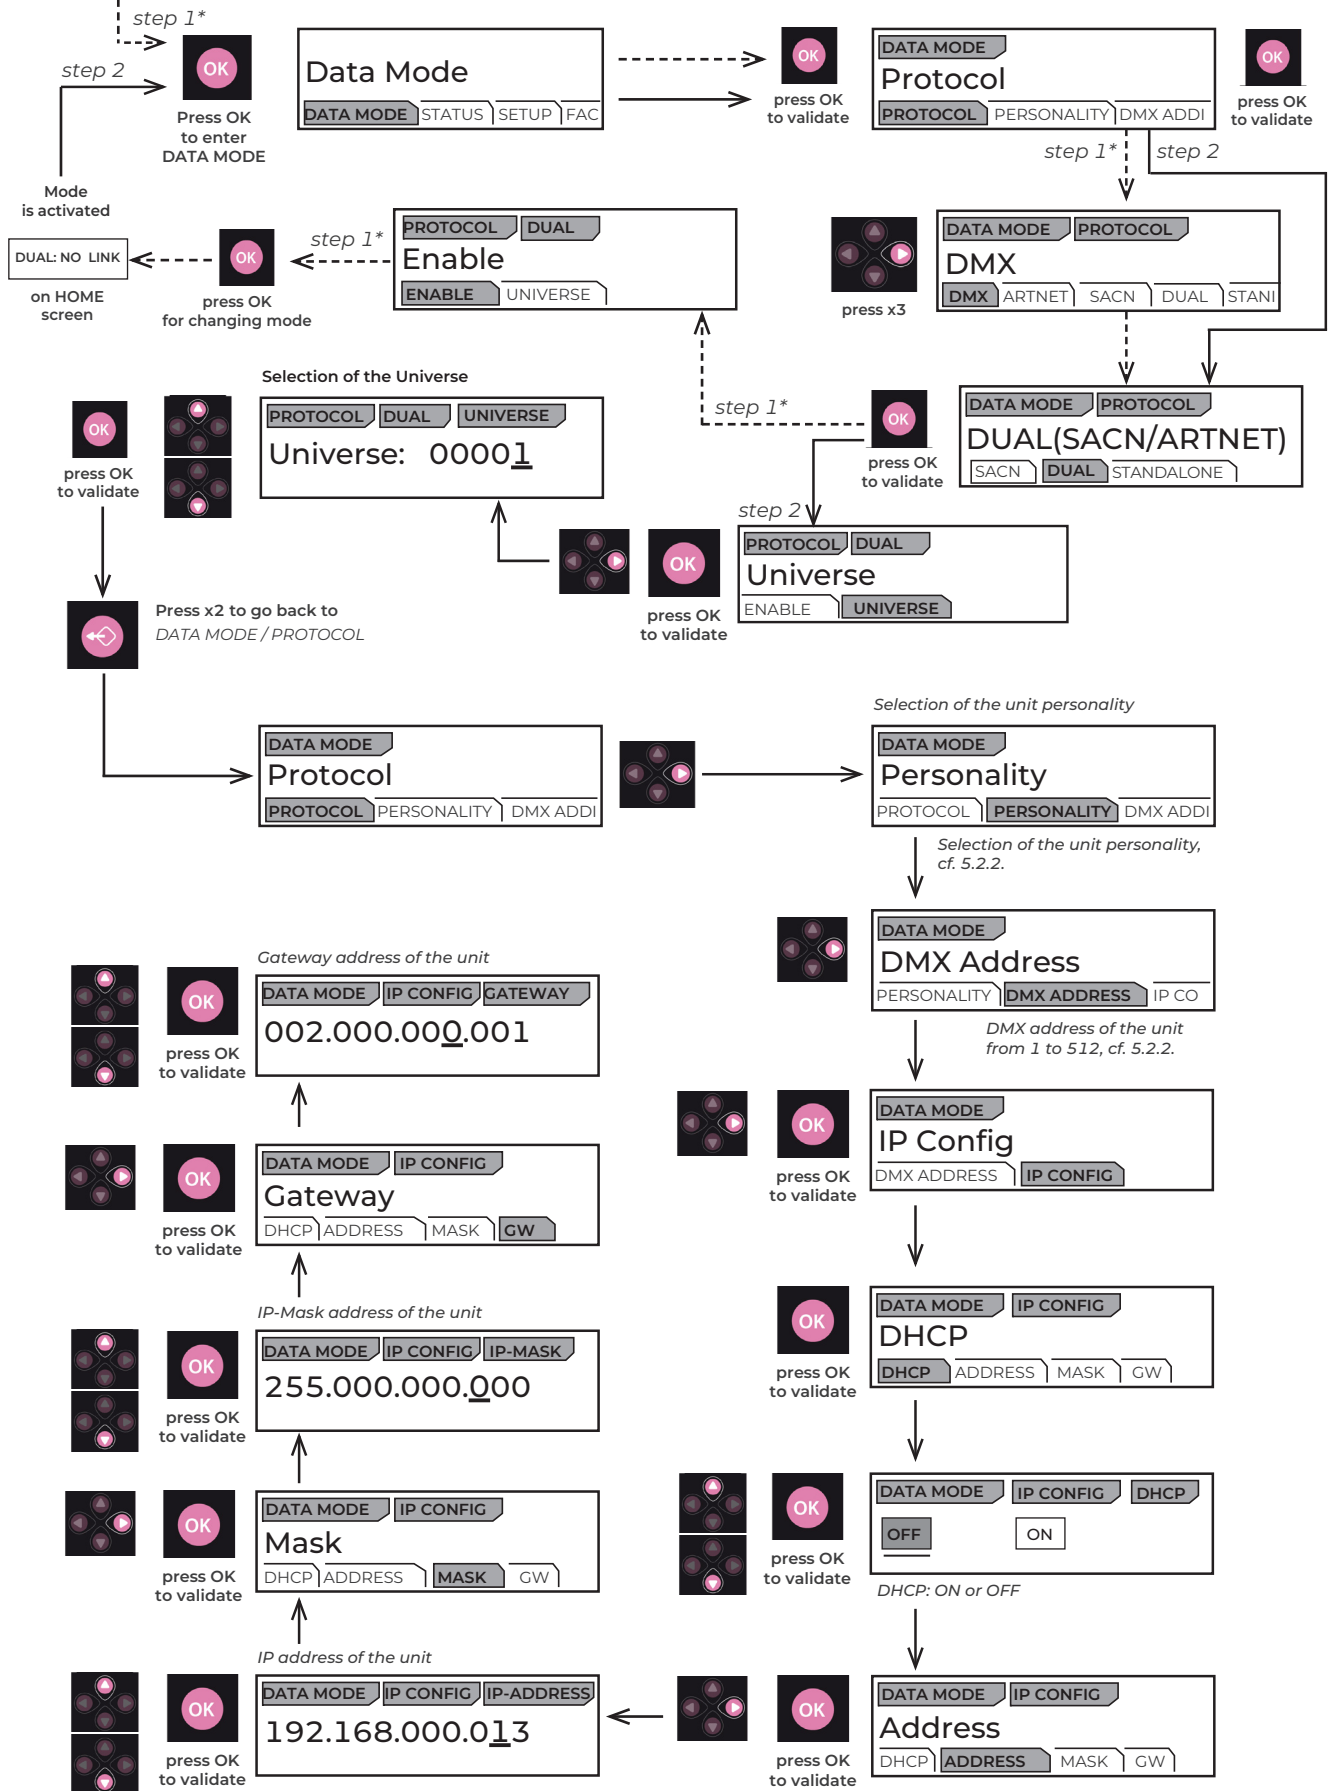

5.4.4.1 Control

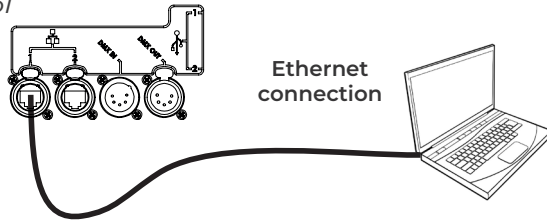


The fixture must be connected to a compatible network or directly linked to a computer with an RJ45 Ethernet cable.


The fixture's IP address: see section 5.4. Network

5.4.4.2 Connection to the Web interface


- 1 - Open a web browser (Microsoft Edge, Firefox, Apple Safari...)
- 2 - Enter the fixture's IP address in the browser's address bar
 - "00X" is read as "X".
 - Never type a zero (0) before the numbers XX or X (see 5.4.4)
- 3 - The HOME page will appear, and all settings can now be viewed and modified.

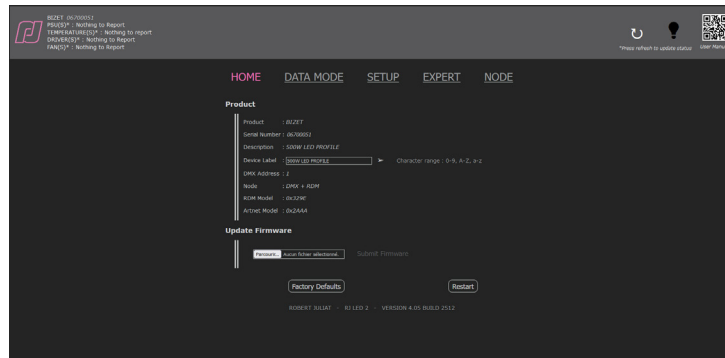


HOME Page

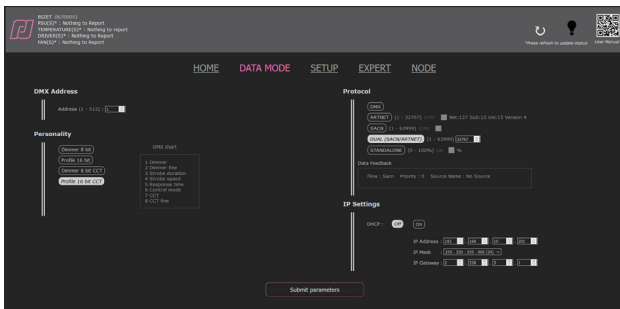


DATA MODE Page

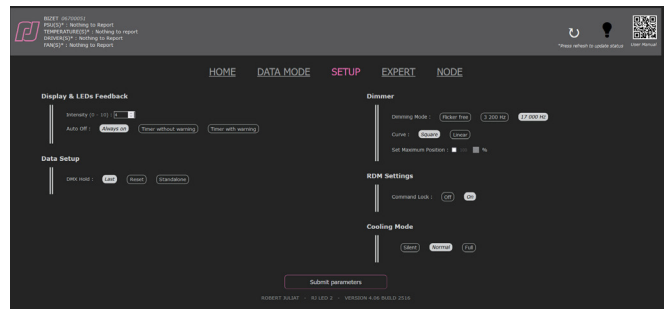

SETUP Page

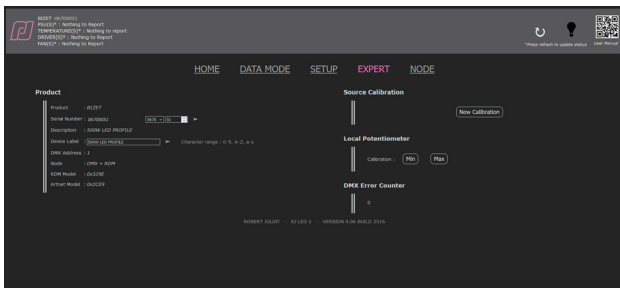

EXPERT Page, password-protected (1280).

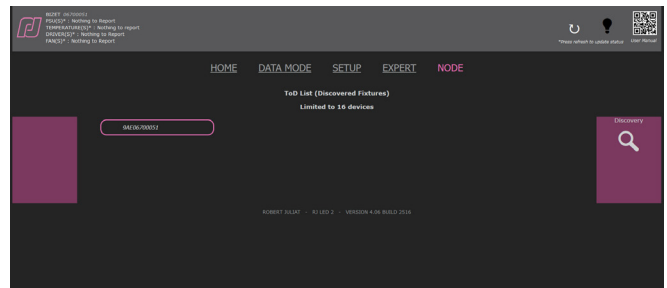

NODE Page

UID* list of devices detected by RDM on the DMX OUT link; the first UID is the fixture.

(*) UID : RDM Unique Identifier

5.4.5 LLRP (Low-Level Reader Protocol)

LLRP is a multicast protocol that facilitates basic IP configuration. It is part of the ESTA E1.33 RDMnet standard.

LLRP can be used for the initial configuration of networked equipment. It provides a low-level mechanism for discovering and configuring the network parameters of devices, including IP settings and basic RDMnet configuration settings.

LLRP Targets expose these parameters for configuration and respond to discovery requests from LLRP Managers. Once an LLRP Manager discovers one or more LLRP Targets, it can use LLRP to send RDM commands to retrieve or modify these parameters.

A SOLUTION FOR INCORRECT OR UNKNOWN IP CONFIGURATION

Network connectivity issues are often caused by misconfigured network addresses, with improperly configured subnet masks being the most common problem.

LLRP uses two multicast IP addresses, enabling communication even when all other network communication has failed.


Since multicast addresses are unaffected by a misconfigured subnet mask, LLRP provides an efficient and reliable solution to recover from network misconfiguration.

In summary, LLRP simplifies the process of identifying and configuring the IP addressing of LLRP-compatible devices on your network.


All Robert Juliat equipment based on the RJ LED2 platform includes LLRP functionality.

Two LLRP Manager software tools are available for free:



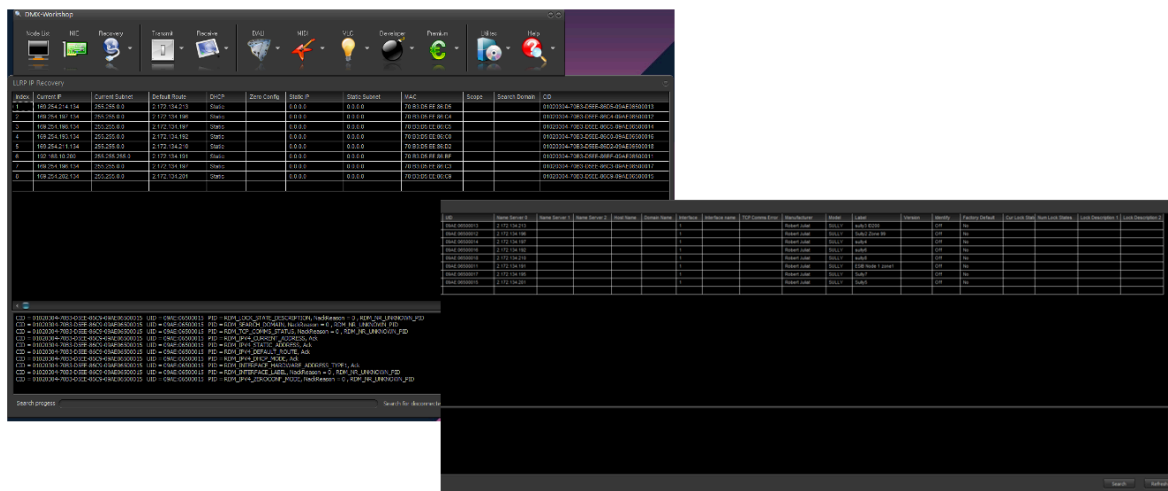


- DMXworkshop by Wayne Howell from Singularity (UK): <https://singularity-uk.com/product/dmx-workshop/>

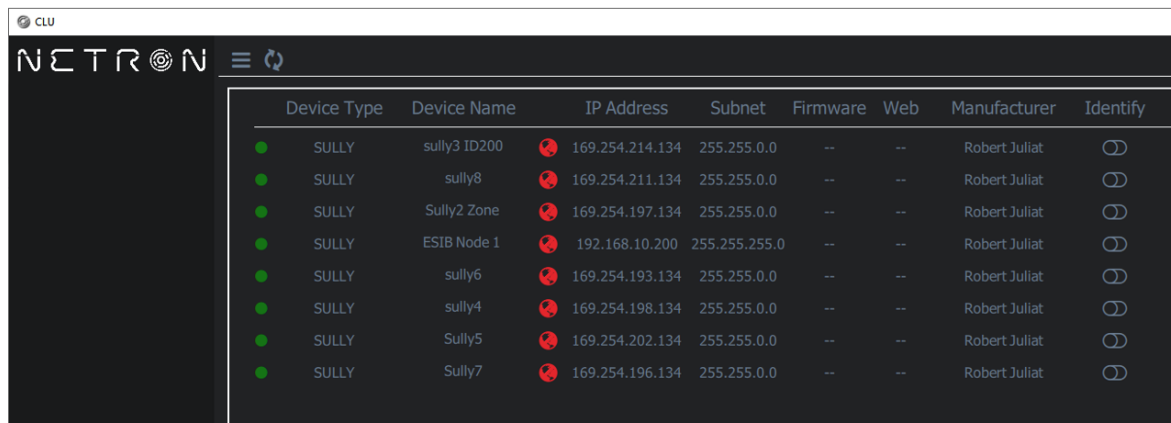


- CLU/Netron from Obsidian : <https://obsidiancontrol.com/netron-clu>




5.5.1 Range

Modes	Silent	Normal	Full
 Cooling Ambient temperature: 30°C	 < 35 dB(A)	 < 37 dB(A)	 < 39 dB(A)
 Brightness	90%	98%	100%

5.6.2 Control

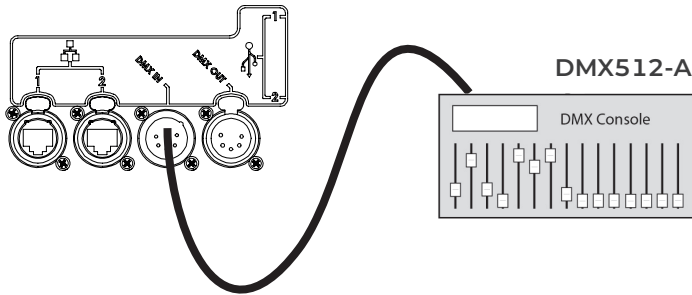

Remotely by DMX512-A
Mode 3 - 4 - 5 - 6

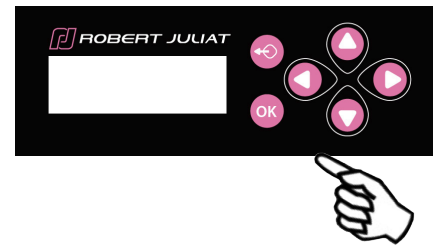

Locally → selection in
SETUP / COOLING

5.6 Local potentiometer

→ selection in **SETUP / LOCAL POTENTIOMETER**

Function	Parameters	Description
<p>Setup</p>	<p>Disable Enable</p>	<p>(1014 & 1014LT)</p> <p>Disable</p> <p>Press OK to validate</p> <p>Enable</p> <p>(1014TC & 1014TCLT)</p>
<p>Rotation</p>	<p>Normal(CW) Invert (CCW)</p>	<p>Normal (CW): Clockwise</p> <p>Invert (CCW): Counterclockwise</p>
<p>Calibration</p>	<p>Min Max</p>	<p>Adjust to the minimum position</p> <p>Press OK to validate</p> <p>Adjust to the maximum position</p> <p>Press OK to validate</p>

6.1 Preventive maintenance

6.1.1 Frequency

General maintenance should be performed at least once a year or more frequently if the equipment is operated in adverse conditions (smoke, heat, humidity, touring, etc.).

6.1.2 General cleaning

Remove dust from the unit.

Front glasses can be cleaned with solutions containing alcohol.

6.1.3 General visual check

- No trace of heat.
- No loose contacts.
- No missing parts.
- Tighten mechanical assemblies (screws, bolts and nuts, etc.).

6.1.4 LED source




- Do not touch the surface of the LED source (no contact with your hands or any tools).
- Do not put compressed air directly on the source.
- Contact a certified RJ distributor in case of residuals or other objects located on the surface of the LED source.

6.1.5 Optics

Only use solutions containing alcohol to clean optical parts (lenses).


- To clean the optical parts, use a soft cloth in combination with distilled water or isopropyl alcohol recommended for coated optics. Do not use any cleaning product that contains solvents or abrasives, as these can cause surface damage.
- Dry with a soft lint-free cloth.

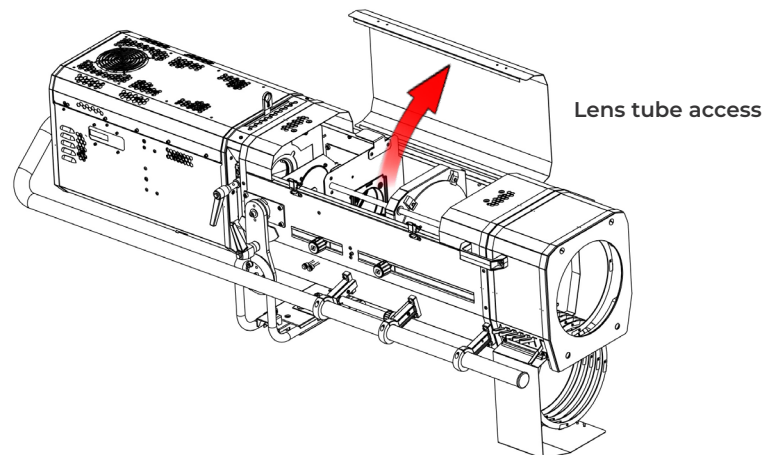

Inner parts & lens holder access.


- To clean the optical parts, use a soft cloth in combination with distilled water or isopropyl alcohol recommended for coated optics. Do not use any cleaning product that contains solvents or abrasives, as these can cause surface damage.
- Dry with a soft lint-free cloth.

Removing the LED housing cover: 1 → 2

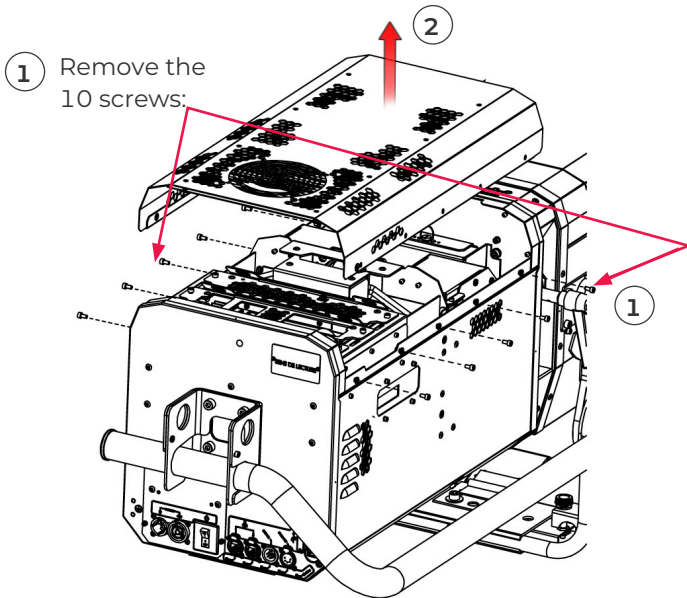


1 Remove the 10 screws:

Removing the LED module: 3 → 4 → 5 → 6

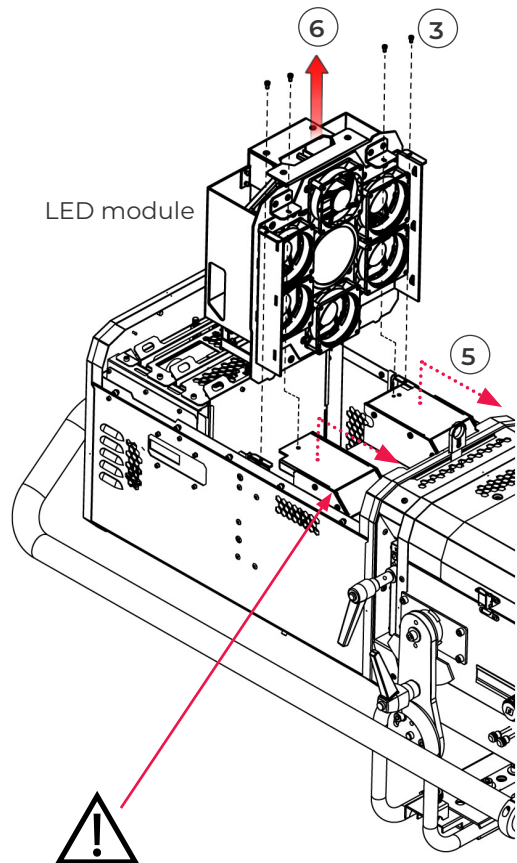

LED module

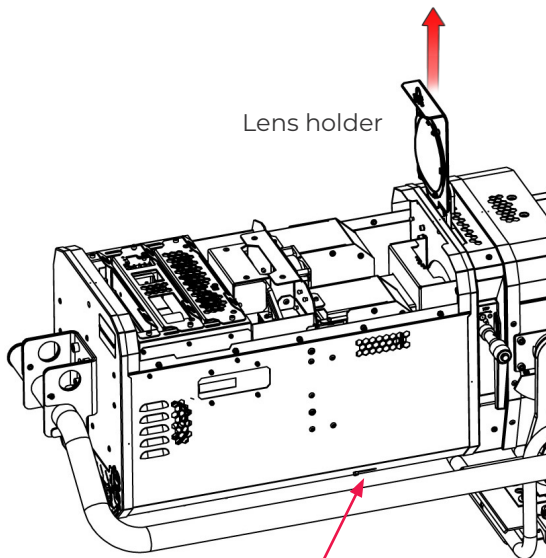

Lens holder



Release the screw on each side.



After removing the 4 screws (step #3) and releasing the 2 screws (step #4), push forward the LED protection unit (step #5). Now you can remove the LED module (step #6).



LED module set-up procedure:

6.2 Analysis

In case of problem, contact RJ distributor with the following information:

- Model, version and serial number of the product.
- From the menu status:
 - Software version
 - LED board IDs
 - Device hours
 - Picture of the Selftest Report (See section 6.6 Selftest)
- Description of the problem.



6.3 Electronic thermal management system

In case of overheating, light intensity will be reduced by the system.

“Power reduction X%” will be shown on the display with the reducing percentage.

6.4 Firmware update

1. Download the firmware from one of the following links :

- www.robertjuliat.com/LED/PDF_PAGE or scan the QR code:
- www.robertjuliat.com/followspots/Arthur
- www.robertjuliat.com/followspots/ArthurLT



2. Unzip the file. There are 4 files:

- Firmware (.upd2 format)
- Firmware history
- Update procedure
- User manual from firmware version V5.0x onwards

3. Switch on the lighting fixture.

4. Connect the fixture to the network using an RJ45 Ethernet cable from your computer.

You can either connect it to your lighting network (RJ45) or directly to your computer (RJ45).

5. Open a Web browser (Microsoft Edge, Firefox, Apple Safari, etc.).

6. Enter the fixture's IP address in the browser's address bar


- “00X” is read as “X”.



- Never type a zero (0) before the numbers XX or X (see section 5.4).


7. Upload your firmware file (.upd2).

In the “Update firmware” window, select the update file and then click on “Submit firmware”.

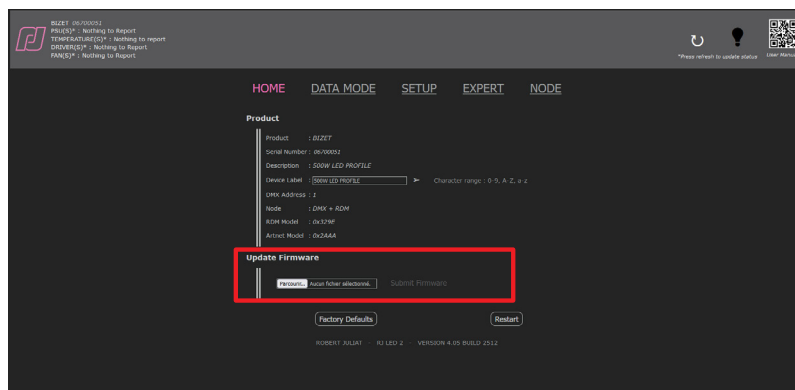


6.5 Factory defaults


Set to factory defaults /
reset through web interface
(Home page)

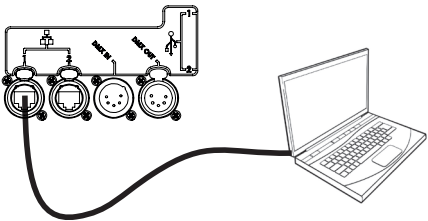

Set to factory defaults /
reset through RDM protocol

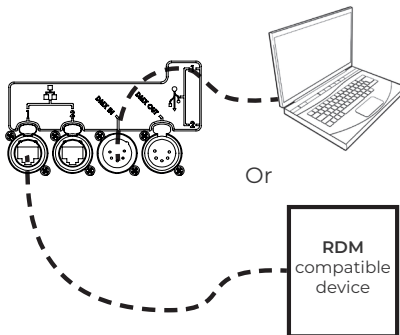

Set to factory defaults /
reset through local control

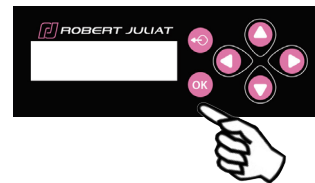

Select **FACTORY DEFAULT**
in the main menu to reset
all values and parameters

6.6 Selftest

Select **SELFTEST** in the STATUS menu :



Press OK
to start
SELFTEST



At the end of each test, a **PASS/FAIL** message will be displayed.

If the DMX and network functions need to be tested, the system will prompt you to perform certain operations.

test report: Fail		P=Pass F=Fail	
fans P	pow P	temp P	dmxi P
dmxo F	net F	drv P	

Test Report

An "F" (FAIL) or "P" (PASS) will be displayed at the end of the self-test (SELFTEST).

If the problem persists, please take a photo of the test result and send it either to your Robert Juliat dealer or to the Robert Juliat After-Sales Service, if requested (email: service@robertjuliat.fr)